

FL100R/FL200R/FL200SR

神牛全彩 LED 柔性布灯

Godox Full color Flexible LED Light

使用手册

Instruction Manual

重要的安全说明及注意事项

Godox 品牌 LED 摄影灯为专业设备, 特别是大功率输出的摄影灯, 仅限具备资质的技术人员操作。使用前请务必完整阅读并理解产品说明书, 严格遵循安全操作指南。未按规定操作可能导致以下风险: 人身伤亡、设备损坏或财产损失。



危险

- 本产品为摄影灯具, 禁止儿童使用。当儿童靠近时, 家长或监护人必须密切监督, 以免儿童因碰撞灯具或私用灯具造成人身伤害。
- 本产品并非普通照明灯具, 不可用于普通照明, 任何有过眼部损伤或眼部敏感的人群均应避免使用本灯具。灯具点亮时, 任何情况下均禁止直视灯珠, 应该在专业灯光师指导下使用强光, 任何情况下避免长时间处于强光环境, 如引起眼睛不适, 请及时关闭灯具, 暂停使用, 及时就医。
- 高压电 (交流电) 供电的产品, 使用带有接地保护装置的插座进行供电。
- 灯具点亮时, 必须小心使用, 禁止接触高温部件, 如 LED 灯珠, 避免造成灼伤。
- 禁止使用损坏的产品。产品在使用过程中, 因跌落、受到挤压或遭受强烈冲击而造成外壳破裂, 请勿继续使用, 以免因接触到内部电子元件而受到电击伤害。
- 为避免火灾、电击或人身伤害危险, 请仅使用生产商推荐的附件。如需使用延长线, 请使用原厂延长线或者制造商推荐的延长线 (额定电流 \geq 该产品额定电流的延长线)。如延长线额定电流小于该产品, 可能造成火灾、电击、其他严重的人身伤害危险或财产损失。
- 只能使用完好无损的接地连接电缆或制造商明确确认可用于供电产品运行的接地延长电缆。损坏或扭曲的连接电缆必须立即更换! 产品输入电源线较长, 请合理放置电源线, 使其处于安全位置, 避免电源线接触到过热物体、避免放置不当导致拉扯损坏或绊倒现场人员。
- 请勿私自拆卸产品, 如产品出现故障, 须由本公司或授权的维修人员进行检查维修。如灯珠损坏或因热变形, 应停止使用, 并及时联系制造商、服务代理商维修灯珠, 以免发生意外。
- 请勿在易爆环境中 (酒精、汽油等易燃挥发性溶剂或甲烷、乙烷等气体附近) 使用和存放本产品。
- 产品在运行期间和运行后, 灯头与用户、其他人员、热敏和可燃材料之间的距离必须随时保持至少 1 米以上。
- 在清洁和维修产品时, 请先关机, 再从电源插座上拔下该产品的电源线插头。不使用时, 禁止拉扯电源线以将产品的电源线插头从电源插座中拔出。应是用手抓住产品的电源线插头插头两端, 将插头从电源插座中拔出。

警告

- 部分产品无防水性能，此类产品请让其保持干燥，禁止浸入水中或其他液体中，安装时需干燥且通风处，避免在雨天、潮湿、多尘或过热环境下使用。请勿将任何物体置于灯具上或使液体流入灯具内部，以免发生意外。
- 不能阻挡、覆盖产品散热口。
- 使用后，产品完全冷切后才能包装。
- 部分产品使用电池供电：
 1. 请勿使用说明书中未指定的任何电池、电源或附件；
 2. 请将电池和其他附件置于儿童及婴幼儿无法触及之处。如果儿童或婴幼儿吞下电池或附件，请立刻就医；
 3. 如果电池漏液、变色、变形、冒烟或发出异味，请立刻将其取出。在取出过程中请小心，以免烫伤。如果继续使用，可能会引起火灾、触电或皮肤烫伤；
 4. 请勿使用任何变形或改造过的电池；
 5. 请勿拆卸或改造本产品或电池；
 6. 请勿加热电池或焊接电池；
 7. 请勿让电池与火或水接触；
 8. 请勿让电池受到强烈的外力撞击；
 9. 请勿将电池的正负端错误插入，或将新旧电池或不同类型的电池混合使用。

小心

- 使用产品前，必须拆除所有运输包装材料和保护装置；
- 不使用产品时，请及时关机和停止供电；
- 清洁本产品时，请勿用湿布擦拭，请用干燥的软布擦拭产品污垢。
- 安全说明依据本厂严格测试制定，产品设计和规格如有变更，恕不另行通知。客户可以登录神牛官网查看最新的电子版说明，了解产品最新资讯。

请勿直视光源

前言


感谢您购买神牛产品。

神牛全新推出全彩 LED 柔性布灯 FL100R、FL200R、FL200SR, 支持 100V-240V 供电, 或另购 14.8V 或 26V 的 V 口电池供电; 拥有 CCT/HSI/RGBW/GEL/FX 多种色彩模式、千分级亮度调节、4 种调光曲线、以及有线 DMX 和无线蓝牙等控制属性完美胜任灯光工作场合; 适用于短视频拍摄、广告拍摄、电商直播、商业摄影、影视剧等场景。

部件名称


灯体


- 1. 灯珠
- 2. 连接线
- 3. 安装孔

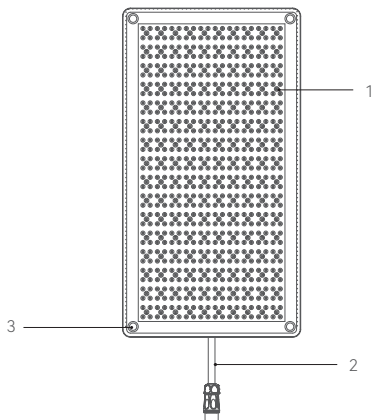

注：FL100R、FL200R、FL200SR 灯体尺寸不同，部件介绍以 FL100R 为例子。


控制器

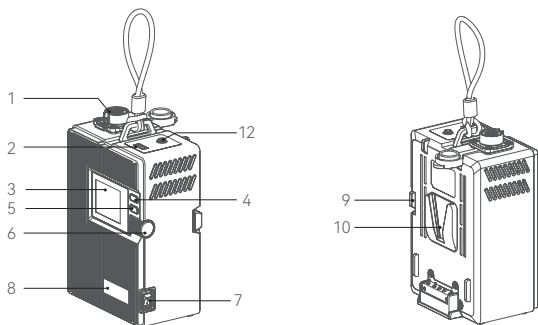

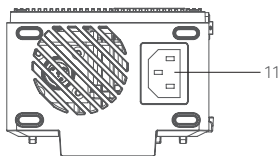


- | | |
|-------------------|----------------|
| 1.DC OUTPUT 接口 | 7. 开关按键 |
| 2.USB-A 接口 | 8.NFC 感应区 |
| 3. 彩屏 | 9. 电池拆卸推制 |
| 4.MODE 按键 | 10.V 口电池槽 |
| 5.MENU 按键 | 11.AC INPUT 接口 |
| 6. 调节按钮 (滚动 / 短按) | 12. 有线 DMX 转接孔 |

 
FL100R K1 物品清单



灯体 ×1

 

支撑架 ×1

 

柔光箱 FS100 ×1



控制器 ×1



转接座 ×1



连接线 ×1



AC 电源线 ×1




收纳包 ×1




说明书 ×1


FL200R K1 物品清单

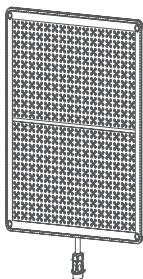

灯体 ×1

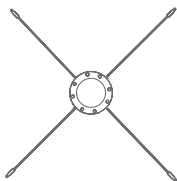

支撑架 ×1

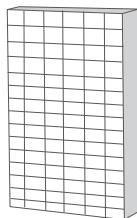

柔光箱 FS200 ×1



控制器 ×1



转接座 ×1



连接线 ×1



AC 电源线 ×1

 


收纳包 ×1




说明书 ×1


FL200SR K1 物品清单



灯体 ×1

 

支撑架 ×1

 

柔光箱 FS200S ×1



控制器 ×1




转接座 ×1



连接线 ×1



AC 电源线 ×1

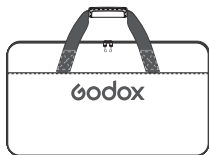

收纳包 ×1



说明书 ×1

注：说明书中线图均为示意图，仅供参考。由于产品不断更新与升级，产品实物与线图可能存在差异，请以实物为准。

另购配件

FL100R 布灯: 气垫柔光箱FA100、柔光箱裙边SS-FS100


FL200R 布灯: 气垫柔光箱FA200、柔光箱裙边SS-FS200、半球柔光箱FP200

FL200SR 布灯: 气垫柔光箱FA200S、柔光箱裙边SS-FS200S



将布灯安装至灯架

第一步: 装上支撑架



FL100R: 直接将支撑架尾端的弯钩沿着布灯上的安装孔扣入。

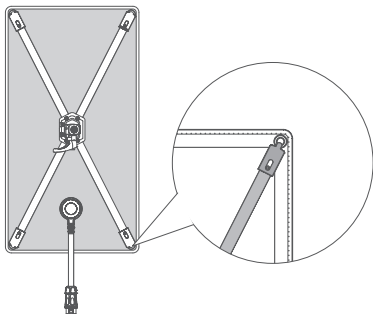

FL200R: 将支撑架的四根杆子沿着凹槽依次展开, 再将支撑架尾端的弯钩沿着布灯上的安装孔扣入。

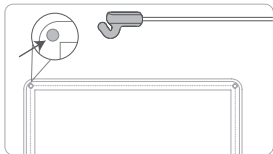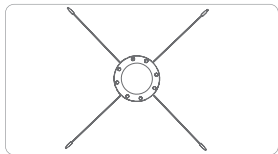


FL200SR: 将支撑架尾端的弯钩沿着布灯上的安装孔扣入, 往下按压支撑架中心部位, “咔”一声自动锁紧; 如需将杆子收拢回去, 按住杆子上的推制往中心推动即可。

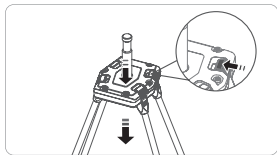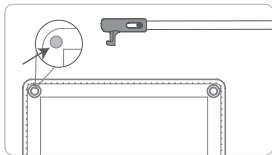


第二步: 装上转接座

支撑架按以上步骤安装好, 将支撑架的安装头插入转接座的安装孔中, 再将固定旋钮拧紧, 转接座即安装完成。

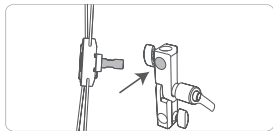

第三步: 装上灯架


将转接座插入另购的灯架, 旋转固定旋钮进行锁紧, 整灯便安装在灯架上。

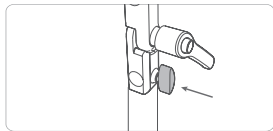

安装柔光箱 (标配)


标配柔光箱中内含①柔光箱、②柔光布、③格栅, 以及收纳袋。

灯体与柔光箱的边缘均设有魔术贴, 先沿着布灯的边, 将柔光箱粘贴在布灯上, 然后在柔光箱的内侧依次粘贴柔光布和格栅, 标配的柔光箱即安装完毕。

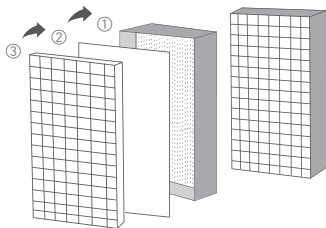

安装裙边 (另购)


按照以上步骤安装好柔光箱, 将裙边沿着柔光箱外侧的魔术贴粘好即可, 裙边四周设有可撕魔术贴条, 根据需要的控光效果自行设定。

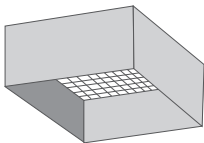

安装气垫柔光箱 (另购)


气垫柔光箱中含①气垫柔光箱、②格栅、③裙边, 以及气泵、修补贴、收纳袋。

灯体与气垫柔光箱的边缘均设有魔术贴, 先将气垫柔光箱充气完成, 沿着布灯的边将其粘贴在布灯上, 然后沿着气垫柔光箱的魔术贴依次粘贴上格栅和裙边, 气垫柔光箱即安装完毕。

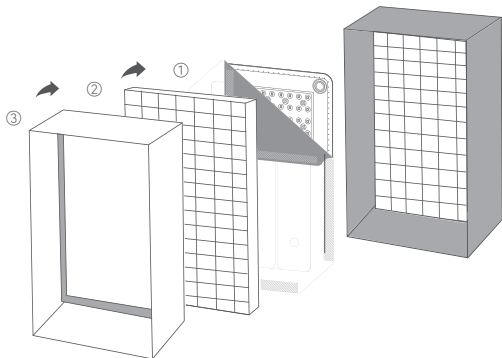

连接 DMX 控制台


另购 DMX 转接线 DMX-TRS1, 插入有线 DMX 转接孔后即具备 DMX 输出口和输入口, 再另购 DMX 连接线连接控制台。

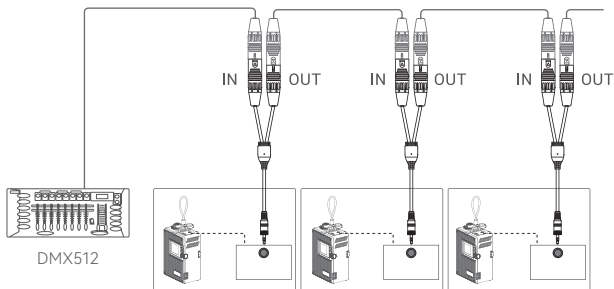

注: 仅展示连接 DMX512 控制台方式, 控制台、连接线、转接线 DMX-TRS1 需另购。

供电方式


AC 供电

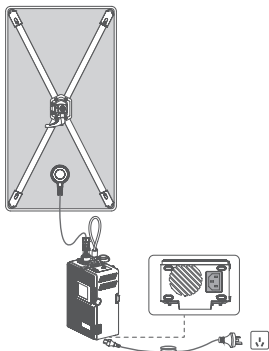

注: 在拆装连接线或电源线时请先关闭电源, 严禁通电时插拔。

V 口电池供电

如需取下电池请按住
电池推制

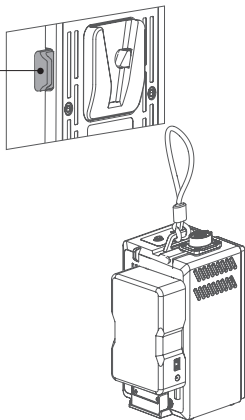

注：AC 供电切换 V 口电池供电时，请先关机并将电源线拔掉，再插入一节另购的 V 口电池（14.8V 或 26V），开机使用。

不同状态下灯具的最大亮度值

灯具搭配不同 V 口电池	线性	S 曲线	指数	对数
FL100R (14.8V)	100%	100%	100%	100%
FL100R (26V)	100%	100%	100%	100%
FL200R/FL200SR(14.8V)	60%	54.5%	82.2%	31.5%
FL200R/FL200SR (26V)	100%	100%	100%	100%

开机 / 关机

接通电源后，拨动开关按键至 (I) 实现开机，拨动开关按键至 (O) 实现关机。

模式选择

短按 MODE 按键进入模式选择，滚动调节按钮可选图中任意一种模式，短按调节按钮进入该模式的具体设置。通过短按并滚动调节按钮设置参数值，向上滚动递增参数值，向下滚动递减参数值，设置完毕短按 MODE 按键返回上一级。




CCT 模式

选中 CCT 后短按调节按钮进入该模式，可选亮度 / 色温 / GM。

亮度范围: 0.0% ~ 100.0%

色温范围: 1800K ~ 10000K

GM 范围: -100% ~ +100%

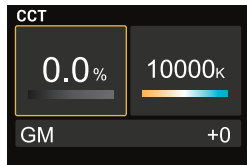


HSI 模式

选中 HSI 后短按调节按钮进入该模式, 可选亮度 / 色相 / 饱和度。

亮度范围: 0.0% ~ 100.0%

色相范围: 0° ~ 360°

饱和度范围: 0% ~ 100%

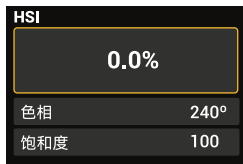

RGBW 模式

选中 RGBW 后短按调节按钮进入该模式, 可选亮度 / 红光 / 绿光 / 蓝光 / 白光。


亮度范围: 0.0% ~ 100.0%

红光范围: 0.0% ~ 100.0%

绿光范围: 0.0% ~ 100.0%

蓝光范围: 0.0% ~ 100.0%

白光范围: 0.0% ~ 100.0%

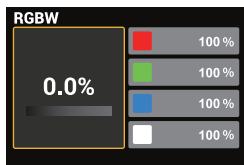

GEL 模式


选中 GEL 后短按调节按钮进入该模式, 可选亮度 / 色片类型 / 颜色选择 / 色温。

亮度范围: 0.0% ~ 100.0%

R-GEL 色片: COR./CAL./SPC./CINE.

L-GEL 色片: COR./COLOR./600/COS./700

色温: 3200K 或 5600K

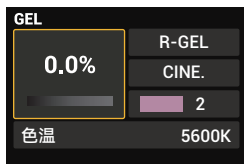

FX 模式

选中 FX 后短按调节按钮进入该模式，通过滚动调节按钮可选 14 类光效，短按调节按钮进入某一类光效的具体设置。

1. 闪光灯

此光效模拟闪光灯闪光或传统镁光灯闪光，常用于营造一种生动、活泼的氛围。

亮度：0.0% -100.0%

开关：开启 / 关闭

触发：A 自动 / M 手动

类型：CCT/HSI

色温 / 色相：1800K-10000K/0-360°

速度：1-100

模式：闪光灯 / 镁光灯

2. 雷闪电

此光效模拟雷电的闪电，常用于营造一种紧张、恐怖或神秘的氛围。

亮度：0.0% -100.0%

开关：开启 / 关闭

触发：A 自动 / M 手动

频率：随机 / 2-20

色温：1800K-10000K

闪烁次数：随机 / 1-10

3. 多云

此光效模拟云层遮挡效果，常用于营造一种阴沉、压抑或悲伤氛围。

亮度：0.0% -100.0%

开关：开启 / 关闭

亮暗比例：30%-90%

速度：随机 / 1-100

4. 坏灯泡

此光效模拟一盏损坏的灯泡闪光，常用于营造昏黄的环境氛围。

亮度：0.0% -100.0%

开关：开启 / 关闭

类型：CCT/HSI

色温 / 色相：1800K-10000K/0-360°

速度：1-100

5. 电视机

此光效模拟电视机或屏幕的光线效果，常用于营造出一种冷淡、机械或数字化的氛围。

亮度：0.0% -100.0%

开关：开启 / 关闭

类型：CCT/HSI

速度：1-100

6. 蜡烛

此光效模拟蜡烛的光线效果，常用于营造出一种柔和、温暖、闪烁的氛围。

亮度：0.0% -100.0%

开关：开启 / 关闭

速度：1-100

7. 火

此光效模拟火焰的光线效果，常用于营造出一种明亮、热烈、闪烁氛围。

亮度：0.0% -100.0%

开关：开启 / 关闭

速度：1-100

8. 烟花

此光效模拟烟花的光线效果，常用于营造出一种绚丽、多彩、浪漫的氛围。

亮度：0.0% -100.0%

开关：开启 / 关闭

速度：1-100

余烬：1-100

9. 爆炸

此光效模拟爆炸的光线效果，常用于营造出一种明亮、猛烈、闪烁氛围。

亮度：0.0% -100.0%

开关：开启 / 关闭

触发：A 自动 / M 手动

类型：CCT/HSI

色温 / 色相：1800K-10000K/0-360°

速度：1-100

余烬：1-100

10. 焊接

此光效模拟焊接的光线效果，常用于营造出一种炽热、机械的氛围。

亮度: 0.0% -100.0%

开关: 开启 / 关闭

类型: CCT/HSI

色温 / 色相: 1800K-10000K/0-360°

速度: 1-100

11. 警车

此光效模拟警车灯光的闪烁效果，常用于营造紧张、追逐或紧张氛围。

亮度: 0.0% -100.0%

开关: 开启 / 关闭

颜色: 红 + 蓝、红、蓝、蓝 + 白、蓝 + 黄、黄、红 + 蓝 + 白、红 + 黄 + 蓝

模式: 1-5

12.SOS

此光效模拟 SOS 求救信号的闪烁效果，常用于营造危险、求救或紧急情况氛围。

亮度: 0.0% -100.0%

开关: 开启 / 关闭

类型: CCT/HSI

色温 / 色相: 1800K-10000K/0-360°

13. 彩光循环

此光效模拟彩色光线的循环和变化效果，常用于营造一种梦幻、科幻的氛围。

亮度: 0.0% -100.0%

开关: 开启 / 关闭

速度: 1-100

饱和度: 0%-100%

14. 派对

此光效模拟彩色光线、闪光灯和激光等效果，常用于营造出一种狂欢、欢乐、高能氛围。

亮度: 0.0% -100.0%

开关: 开启 / 关闭

速度: 1-100

饱和度: 0%-100%

注: 根据需求滚动调节按钮设置当前参数值, 设置完毕后短按并滚动调节按钮可跳入下一栏参数进行设置; 选中手动时, 通过短按一次调节按钮触发一次该光效; 某个光效设置完毕后短按 MODE 按键回到 14 类光效选择界面。


菜单设置

短按 MENU 按键进入菜单界面, 滚动调节按钮进行选择, 选定后短按调节按钮进入该项的具体设置, 设置完毕短按 MENU 按键返回上一级。



1. 蓝牙

短按调节按钮进入蓝牙设置, 通过短按并滚动调节按钮设置开启或关闭; 如需蓝牙复位, 滚动调节按钮到复位栏, 短按并滚动调节按钮即可; 下方查看蓝牙 MAC 码, 方便查找灯具。

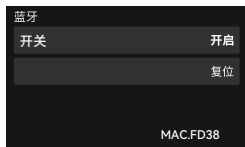

“Godox Light”app下载

扫描二维码即可下载“Godox Light”手机app（安卓和苹果系统都可以使用）。

注:

1. 首个移动设备（手机或平板电脑）可直接使用app 操控灯体。更换其他移动设备时，灯体需进行蓝牙重置方可正常使用 app。
2. app 需升级至 V3.0 以上版本。



2.DMX

短按调节按钮进入 DMX 设置，通过滚动并短按调节按钮设置参数值，如下表所示。

DMX	
地址	001
RDM	关闭
终止开关	关闭
增强通道	关闭

一级选项	二级选项	说明
地址	001-512	起始地址
RDM	开启	开启 RDM, 开启后控制台可设置灯具地址及 DMX 模式
	关闭	关闭 RDM
终止开关	开启	开启 DMX 终端
	关闭	关闭 DMX 终端
增强通道	开启	开启增强通道信号
	关闭	关闭增强通道信号
DMX 丢失状态	保持最后状态	失去 DMX 控制信号后, 在关机或再次接收有效 DMX 控制信号前, 持续使用最后一次接收的 DMX 控制信号。
	直接关闭	灯具直接熄灭
	2 分钟后熄灭	失去 DMX 控制信号后, 持续使用最后一次接收的 DMX 控制信号 2 分钟, 2 分钟后灯具熄灭。注: 如 2 分钟内接收到有效 DMX 控制信号, 则使用新的 DMX 控制信号。
MODE (模式)	01: CCT 8 Bit	8 位 CCT 模式
	02: HSI 8 Bit	8 位 HSI 模式
	03: RGB 8 Bit	8 位 RGB 模式
	04: RGBW 8 Bit	8 位 RGBW 模式
	05: CCT+HSI 8 Bit	8 位 CCT+HSI 模式
	06: CCT+RGBW 8 Bit	8 位 CCT+RGBW 模式
	07: FX 8 Bit	8 位 FX 模式
	08: GEL 8 Bit	8 位 GEL 模式
	09: CCT 16 Bit	16 位 CCT 模式
	10: HSI 16 Bit	16 位 HSI 模式
	11: RGB 16 Bit	16 位 RGB 模式
	12: RGBW 16 Bit	16 位 RGBW 模式
	13: FX 16 Bit	16 位 FX 模式
	14: GEL 16 Bit	16 位 GEL 模式
	15: ULTIMATE 8 Bit	8 位 ULTIMATE DMX 模式
	16: ULTIMATE 16 Bit	16 位 ULTIMATE DMX 模式

注: 使用 DMX/RDM 控制台控制灯具, 可登录官网 <https://www.godox.com.cn/> 下载 DMX 模式表。


3. 调光曲线

短按调节按钮进入调光曲线设置，通过滚动调节按钮可选线性 / S 曲线 / 指数 / 对数，选定后短按调节按钮完成设置。



4. 控制模式

短按调节按钮进入控制模式设置，通过短按并滚动调节按钮可选常规 / 低亮两种模式，选定后短按调节按钮；滚动调节按钮至下一栏设置频率，范围：1-11。

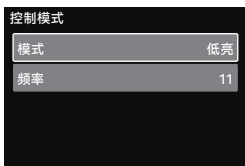

控制模式	适用环境	调光特性	闪烁
常规模式	正常调光	整个调光范围内都很好	不太会出现闪烁
低亮模式	电视 / 电影	低亮度水平时很好	可能出现闪烁

5. 屏幕设置

短按调节按钮进入屏幕设置，通过滚动调节按钮设置 10%-100% 屏幕亮度。



6. 语言

短按调节按钮进入语言设置, 通过滚动调节按钮可选 English/ 简体中文, 选定后短按调节按钮完成设置。




7. 恢复出厂设置

短按调节按钮进入恢复出厂设置, 通过滚动调节按钮可选确认 / 取消, 短按调节按钮确认恢复出厂, 灯具自动重启, 界面出现简体中文和 English 选项, 设置需要的语言后灯体亮度值自动变为 100%。



8. 灯具信息

短按调节按钮进入此界面, 可查看本机 (控制器) 的基础信息。

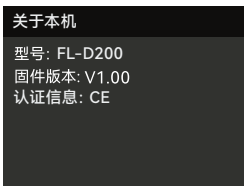

9. 升级说明

1. 在官网(<https://www.godox.com.cn/firmware-continuous-light>)下载新固件到 U 盘上。
2. 在关机状态下, 将存有新固件的 U 盘插入 USB-A 接口。
3. 开机, 灯具自动进入升级界面。
4. 升级完毕自动跳回主界面。

注:

1. 必须在官网下载新固件, 存放在 U 盘根目录里, 而且仅有一个 BIN 文件。
2. USB-A 接口支持供电, 输出电压电流 5V $\overline{\text{---}}$ 1A, 请勿接入大功率 USB 设备。

NFC 加灯

通过手机 NFC 功能与灯具 NFC 芯片相互通信后完成快速添加灯具到【Godox light】App 中。

- 1、前置条件: 灯具支持 NFC 添加、【Godox light】App 版本 V3.2.4 以上、手机开启蓝牙和 NFC 功能。
- 2、使用方法: 前置条件成立情况下, 打开【Godox light】进入对应场景中, 点击【+】选择【NFC 加灯】功能, 进入【NFC 添加设备】页面将手机 NFC 感应区靠近灯具感应区即可完成加灯, 支持多灯添加。

注意: Android 系统直接靠近感应加灯, iOS 需点击右上角 () 图标后出现弹窗感应加灯。

照度数据

FL100R

色温	测试条件	照度单位	1m	2m	3m
1800K	裸灯	lux	909	224	103
		fc	85	21	10
2800K		lux	2,840	688	327
		fc	264	64	30
3200K		lux	3,320	3,214	385
		fc	308	805	36
4300K		lux	4,630	1,110	535
		fc	96	103	50
5600K		lux	4,090	983	472
		fc	380	91	44
6500K		lux	3,550	848	413
		fc	330	79	38
7500K		lux	3,160	755	369
		fc	294	70	34
8500K		lux	3,270	772	380
		fc	303	72	35
10000K		lux	3,430	810	401
		fc	319	75	37
R		lux	329	88	40
		fc	31	8	4
G		lux	1,110	286	134
		fc	103	27	13
B		lux	161	38	19
		fc	15	4	2

FL200R、FL200SR

色温	测试条件	照度单位	1m	2m	3m
1800K	裸灯	lux	2,580	720	340
		fc	240	67	32
2800K		lux	4,830	1,390	652
		fc	448	129	61
3200K		lux	5,630	1,610	764
		fc	523	149	72
4300K		lux	7,490	2,180	1,020
		fc	696	202	95
5600K		lux	7,050	2,050	959
		fc	655	190	89
6500K		lux	6,130	1,790	836
		fc	569	166	78
7500K		lux	5,460	1,590	746
		fc	507	148	69
8500K		lux	5,560	1,620	758
		fc	517	150	70
10000K		lux	5,650	1,650	773
		fc	525	153	72
R		lux	700	215	139
		fc	65	20	13
G		lux	1,650	550	199
		fc	155	51	19
B		lux	366	103	94
		fc	34	10	9

以上数据均为平均值, 非绝对值, 以上测试皆在灯体 100%亮度下进行。

规格参数

控制器

型号	FL-D200
AC INPUT 接口	100-240V ~ 50/60Hz 250W
色温范围	1800K-10000K
GM 范围	-100% -100%
调光范围	0.0% -100.0%
调光模式	线性 /S 曲线 / 指数 / 对数
CRI	≈ 95
TLCI	≈ 95
控制方式	有线 DMX/RDM, 蓝牙, 控制器控制
蓝牙控制距离	30m
USB-A 接口	固件升级 /5V $\overline{\text{III}}$ 1A 供电
工作环境温度	-20°C ~ 45°C
尺寸	≈ 104*75*160mm
净重	≈ 0.85kg

灯体

型号	FL100R	FL200R	FL200SR
裸灯尺寸≈	344*636mm	637*637mm	344*1220mm
裸灯净重≈	0.6kg	1kg	1.05kg

规格和参数如有变更, 恕不另行通知。

Important Safety Instructions and Precautions

Godox LED lights, especially those with high power output, are professional equipment and should only be operated by professionals. Carefully read and fully understand the instruction manual before use and strictly follow the safety instructions. Failure to do so may result in death, serious injury, damage to the product, or other property damage.



Danger

- Professional lighting fixture is prohibited for children. When children are near, parents or guardians must supervise closely to prevent them from personal injury due to collision with light or private use of light.
- This product is not ordinary lighting fixture and cannot be used for general lighting. Anyone who has suffered eye damage or has sensitive eyes should avoid using this product. When the light is on, it is forbidden to look directly at the lamp beads under any circumstances. Strong light should be used under the guidance of professional lighting engineers. Avoid prolonged exposure to strong light under any circumstances. If it causes eye discomfort, turn off the light, suspend use and seek medical attention promptly.
- For high-voltage (mains) powered products, use a socket with an earth protection device for power supply.
- When the light is on, it must be used with care. Do not touch high-temperature parts, such as LED lamp beads, to avoid burns.
- Do not use damaged product. Stop using immediately if the product shell is cracked due to falling, squeezing, or strong impact, to avoid touching the internal electronic components and getting an electric shock.
- Please use only the accessories recommended by our factory to avoid fire, electric shock or personal injury. If an extension cord is required, use the original extension cord or one recommended by the manufacturer (an extension cord with a current rating greater than or equal to that of the equipment). Extension cords rated at less than that of the equipment may cause fire, electric shock, other serious personal injury hazards, or property damage.
- Use only intact ground connection cables or ground extension cables that have been expressly recognized by the manufacturer for use in the operation of powered products. Damaged or twisted connection cables must be replaced immediately! The product has a long input power cord, so please place the power cord in a safe position to avoid it coming into contact with overheated objects, being improperly placed and causing

damage by pulling, or tripping over on-site personnel.

- Do not disassemble the product without permission. If the product malfunctions, it must be checked and repaired by authorized maintenance personnel. If the lamp bead is damaged or deformed by heat, stop using it, and contact the manufacturer, service agent or qualified maintenance personnel to replace the lamp bead in time to avoid accidents.
- Do not use and store this product in explosive atmospheres (near flammable volatile solvents such as alcohol, gasoline, or gases such as methane and ethane).
- Maintain at least 1 meter distance between the light head and the user, other people, and heat-sensitive or flammable items during and after operation of the product.
- When cleaning and repairing the product, turn off the power before unplugging the product's power cord from the power outlet. When not in use, do not pull the power cord to unplug the product from the power outlet. Unplug the product from the power outlet by grasping both ends of the plug with your hands.



Warning

- This equipment is not waterproof, please keep it dry and do not immerse it in water or other liquids. The equipment should be installed in a dry and ventilated place, and avoid using it in rainy, humid, dusty or overheated environments. Do not place any objects on the light or let liquid flow into the light to avoid accidents.
- Do not block or cover the heat dissipation port of the product.
- After use, the product should be completely cooled before packaging.
- Some products are battery powered:
 1. Do not use any batteries, power sources or accessories not specified in the instruction manual.
 2. Keep batteries and other accessories out of the reach of children and infants. In the instance that a child or infant swallows a battery or accessory, immediate emergency medical attention is required.
 3. If the battery leaks, becomes discolored, deformed, emits smoke, or emits an abnormal odor, remove it immediately. Be careful during removal to avoid burns. Continued use may result in fire, electric shock, or skin burns.
 4. Do not use any deformed or modified batteries.
 5. Do not disassemble or modify this product or battery.
 6. Do not heat or solder the battery.
 7. Keep the battery away from fire or water.
 8. Do not subject the battery to strong external impacts.
 9. Do not incorrectly insert the positive and negative ends of batteries, or mix old and new batteries or different types of batteries.



Attention

- All transport protective materials and packages on the product must be removed before use.
- When not in use, please turn off the product and stop the power supply promptly.
- When cleaning the device, please do not use a wet cloth to wipe, please use a dry soft cloth to wipe the device dirt.
- The safety instructions are formulated according to the strict testing of the factory, and the design and specifications of the equipment are subject to change without prior notice. Customers can view the latest electronic instruction manuals on the official website of Godox and learn about the latest product information.



Do not stare at the operating light source.

Foreword


Thank you for purchasing !

Godox launched the new full color flexible LED lights FL100R, FL200R and FL200SR. They support 100V-240V power supply, separately purchased 14.8V or 26V V-mount battery power supply, CCT/HSI/RGBW/GEL/FX mode, thousand-bit adjustable brightness, four dimming curves, wired DMX and wireless Bluetooth control. These prominent features make them perfectly competent for short video shooting, advertising shooting, e-commerce live streaming, commercial photography, film and television shooting and other scenes.

Names of Parts


Light Body


- 1. Lamp Bead
- 2. Connecting Cable
- 3. Mounting Hole

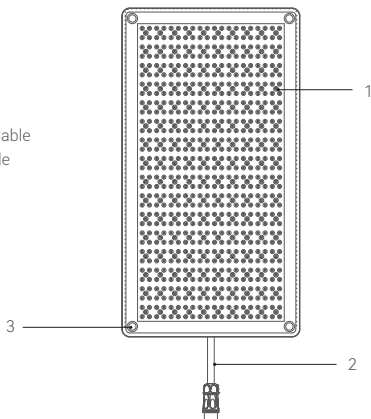

Note: The difference between FL100R, FL200R and FL200SR light bodies is that they are different in size, and the name of parts takes FL100R as an example.


Controller

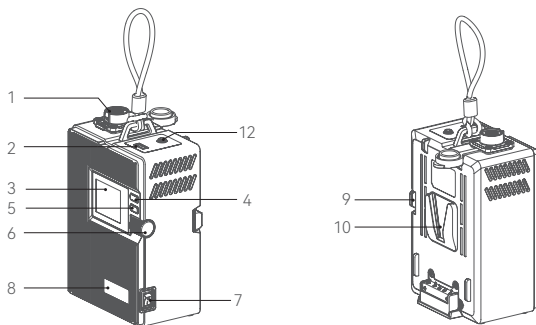

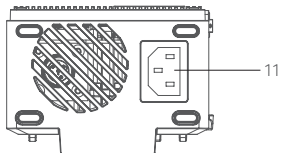


- | | |
|-------------------------------|-----------------------------|
| 1. DC OUTPUT Port | 7. Power Switch Button |
| 2. USB-A Port | 8. NFC Sensing Area |
| 3. Display | 9. Battery Detaching Pusher |
| 4. MODE Button | 10. V-mount Battery Slot |
| 5. MENU Button | 11. AC INPUT Port |
| 6. Select Dial (rotate/press) | 12. Wired DMX Adapter Hole |

 
What's Inside FL100R K1



Light Body ×1

 

Metal Bracket ×1

 

Softbox FS100 ×1



Controller ×1



Adapter Holder ×1



Connection Cable ×1



AC Power Cord ×1




Storage Bag ×1




Instruction Manual ×1


What's Inside FL200R K1

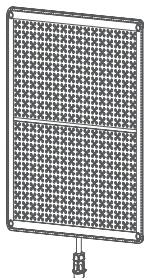

Light Body ×1

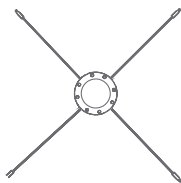

Metal Bracket ×1

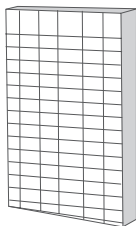

Softbox FS200 ×1



Controller ×1



Adapter Holder ×1



Connection Cable ×1



AC Power Cord ×1

 


Storage Bag ×1




Instruction Manual ×1


What's Inside FL200SR K1



Light Body x1

 

Metal Bracket x1

 

Softbox FS200S x1



Controller x1



Adapter Holder x1



Connection Cable x1



AC Power Cord x1



Storage Bag x1



Instruction Manual x1

Note: Due to continuous updates and upgrades of the products, there may be differences between the actual products and the pictures. Therefore, the pictures are for reference only, products to prevail in kind.

Separately Sold Accessories

FL100R: Air Softbox FA100, Skirt Set for Softbox SS-FS100


FL200R: Air Softbox FA200, Skirt Set for Softbox SS-FS200, Pancake Lantern FP200

FL200SR: Air Softbox FA200S, Skirt Set for Softbox SS-FS200S



Mount the LED Light on the Light Stand

Step 1: Mount on the metal bracket



FL100R: Snap the curved hooks at the ends of the metal bracket into the mounting holes on the light.

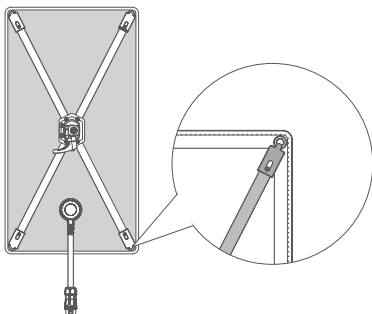

FL200R: Unfold the four poles of the metal bracket along the grooves, then snap the curved hooks at the ends of the metal bracket into the mounting holes on the light.

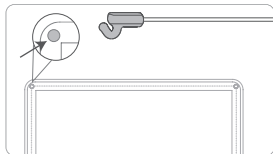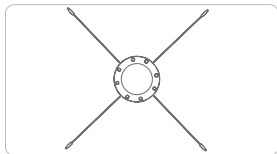


FL200SR: Snap the curved hooks at the ends of the metal bracket into the mounting holes on the light, press down on the center of the metal bracket and it will be locked automatically with a "click". To retract the pole, press and hold the pusher on it to the center.

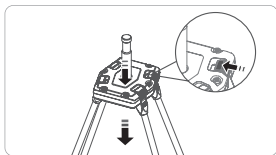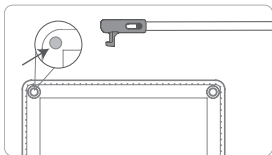


Step 2: Attach to the adapter

Mount the light on the metal bracket according to the above steps, insert the mounting head of the metal bracket into the mounting hole of the adapter, then tighten the fixing knob.

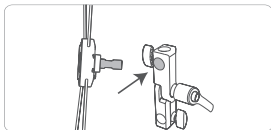

Step 3: Mount on the light stand


Insert the adapter into the light stand, rotate the fixing knob to lock the light as a whole on the light stand.

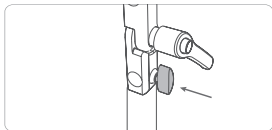

Install the Attached Softbox


The attached softbox includes ① softbox, ② diffuser, ③ grid, and storage bag.

Since the edges of LED light and softbox both have velcros, stick the softbox to the LED light along the sides first, then stick the diffuser and grid in order along the inner side of the softbox.

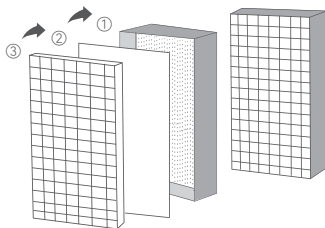

Install the Separately Sold Skirt Set


Install the softbox according to the above steps, stick the separately purchased skirt set along the outer side of the softbox to make it completely covers the light source. There are velcros around the skirt, which can be torn off to set the needed lighting effects.

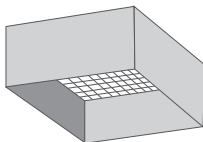

Install the Separately Sold Air Softbox

The air softbox includes ① air softbox, ② grid, ③ skirt set, and air pump, patch tape, storage bag. You can also separately purchase air softbox. The pictures below take F100R as an example.


Since the edges of LED light and air softbox both have velcros, manually inflate the air softbox and stick it to the LED light along the sides first, then stick the grid and skirt set in order along the inner side of the air softbox.

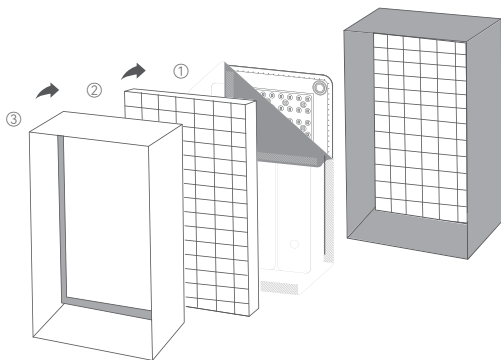

DMX Connection

Wired DMX Connection


After inserting a separately purchased DMX adapter cable DMX-TRS1 into the wired DMX adapter hole, the fixture is equipped with DMX outputs and inputs, then wired DMX connection can be realized by connecting the separately purchased DMX cable to the controller.

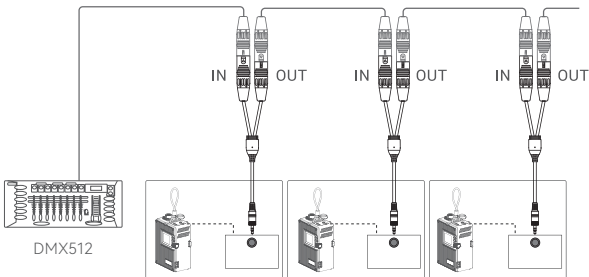

Note: The above pictures only show the method to connect the DMX512 controller, the controller, connecting cable, and DMX adapter cable DMX-TRS1 are sold separately.

Power Supply


AC Power Supply

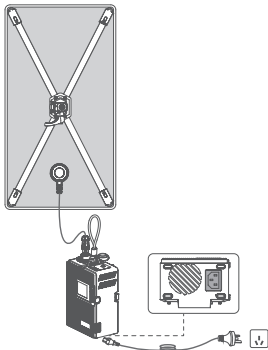

Note: Please turn off the power when disassembling and installing the connection cable or power cord, it is strictly forbidden to plug and unplug when the power is on.

V-mount Battery Power Supply

Press the battery locking pusher on the left can pull out the battery

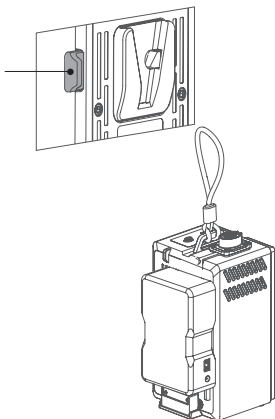

Note: When switching AC power supply to V-mount battery supply, please turn off the power and unplug the power cord first, and insert in the 14.8V or 26V V-mount battery to turn on the power.

Max. Brightness Values in Different Status


Lights with different V-mount batteries	Linear	S-curve	Exponential	Logarithmic
FL100R (14.8V)	100%	100%	100%	100%
FL100R (26V)	100%	100%	100%	100%
FL200R/FL200SR (14.8V)	60%	54.5%	82.2%	31.5%
FL200R/FL200SR (26V)	100%	100%	100%	100%

Power Switch

Connect to power source, toggle the power switch button to (|) to turn the device on, or (O) to turn the device off.


Mode Selection

Short press the MODE button to enter selection interface, rotate the select dial to select the desired mode, then press it to enter the corresponding parameter settings. Rotate the select dial upward to increase the parameters, while rotate downward to decrease the parameters, then press the MODE button to return to the previous interface.

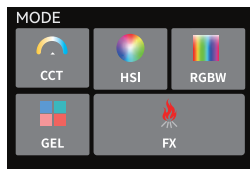

CCT Mode

Short press the MODE button to enter mode selection, rotate and press the select dial to select CCT mode, in which you can adjust the DIM/CCT/GM.

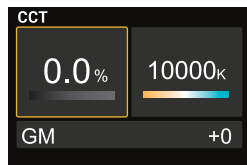


DIM range: 0.0% ~ 100%

CCT range: 1800K ~ 10000K

GM range: -100% ~ +100%

HSI Mode

Short press the MODE button to enter mode selection, rotate and press the select dial to select HSI mode, in which you can adjust the DIM/HUE/SAT.

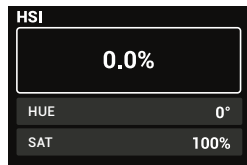

DIM range: 0% ~ 100%

HUE range: 0° ~ 360°

SAT range: 0% ~ 100%

RGBW Mode

Short press the MODE button to enter mode selection, rotate and press the select dial to select RGBW mode, in which you can adjust the DIM/red/green/blue/white.


DIM range: 0.0% ~ 100%

Red range: 0.0% ~ 100%

Green range: 0.0% ~ 100%

Blue range: 0.0% ~ 100%

White range: 0.0% ~ 100%

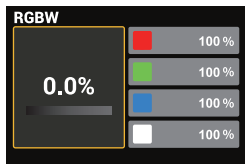

GEL Mode

Short press the MODE button to enter mode selection, rotate and press the select dial to select GEL mode, in which you can adjust the DIM/gel type/color/CCT.


DIM range: 0.0% ~ 100%

Gel type: R-GEL/L-GEL

R-GEL: COR./CAL./SPC./CINE.

L-GEL: COR./COLOR./600/COS./700

CCT range: 3200K or 5600K

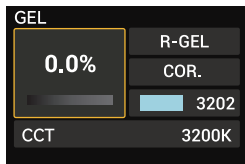

FX Mode

Short press the MODE button to enter mode selection, rotate and press the select dial to select FX mode, in which you can choose among the following 14 effects and adjust their respective parameters.



1. Flash

This light effect simulates the flash of a camera flash or a traditional flash bulb, often used to create a lively and dynamic atmosphere.

DIM: 0.0% -100%
Switch: Turn on/off the effect
Trigger: Auto/Manual
Mode: CCT/HSI
CCT/HUE: 1800K-10000K/0-360°
Speed: 1-100
Mode: Camera Flash/Flash Bulb

2. Lightning

This effect simulates the natural thunder and lightning and is often used to create a tense, terrifying or mysterious atmosphere.

DIM: 0.0%-100%
Switch: Turn on/off the effect
Trigger: Auto/Manual
Frequency: Random /2-20
CCT: 1800K-10000K
Times: Random/1-10

3. Cloudy

This effect simulates the effect of cloud occlusion and is often used to create a gloomy, oppressive or sad atmosphere.

DIM: 0.0% -100%
Switch: Turn on/off the effect
Ratio: 30% -90%
Speed: Random/1-100

4. Broken Bulb

This effect simulates the effect of a broken bulb and is often used to create a dim atmosphere.

DIM: 0.0% -100%
Switch: Turn on/off the effect
Mode: CCT/HSI
CCT/HUE: 1800K-10000K/0-360°
Speed: 1-100

5. TV

This effect simulates the effect of light from a television or screen and is often used to create a cold, mechanical or digital atmosphere.

DIM: 0.0% -100%
Switch: Turn on/off the effect
Mode: CCT/HSI
Speed: 1-100

6. Candle

This effect simulates the effect of light from a candle and is often used to create a soft, warm, shimmering atmosphere.

DIM: 0.0% -100%
Switch: Turn on/off the effect
Speed: 1-100

7. Fire

This effect simulates the effect of light from flame and is often used to create a bright, warm, shimmering atmosphere.

DIM: 0.0% -100%
Switch: Turn on/off the effect
Speed: 1-100

8. Firework

This effect simulates the effect of light from fireworks and is often used to create a gorgeous, colorful, romantic atmosphere.

DIM: 0.0% -100%
Switch: Turn on/off the effect
Speed: 1-100
Embers: 1-100

9. Explosion

This effect simulates the effect of light from explosion and is often used to create a bright, fierce, shimmering atmosphere.

DIM: 0.0% -100%
Switch: Turn on/off the effect
Trigger: Auto/Manual
Mode: CCT/HSI
CCT/HUE: 1800K-10000K/0-360°
Speed: 1-100
Embers: 1-100

10. Welding

This effect simulates the effect of light from welding and is often used to create a hot, mechanical atmosphere.

DIM: 0.0% -100%
Switch: Turn on/off the effect
Mode: CCT/HSI
CCT/HUE: 1800K-10000K/0-360°
Speed: 1-100

11. Cop Car

This effect simulates the effect of light from cop car and is often used to create a tension, chasing atmosphere.

DIM: 0.0% -100%
Switch: Turn on/off the effect
Color: Red+Blue, Red, Blue, Blue+White, Blue+Yellow, Yellow, Red+Blue+White, Red+Yellow+Blue
Mode: 1-5

12. SOS SOS

This effect simulates the flashing effect of an SOS signal and is often used to create a dangerous, distress or emergency atmosphere.

DIM: 0.0% -100%
Switch: Turn on/off the effect
Mode: CCT/HSI
CCT/HUE: 1800K-10000K/0-360°

13. RGB Cycle

This effect simulates the effect cycle and change of colorful lights and is often used to create a fantasy, sci-fi atmosphere.

DIM: 0.0% -100%
Switch: Turn on/off the effect
Speed: 1-100
SAT: 0%-100%

14. Party


This effect simulates the effect of colorful lights, flashes and laser, and is often used to create a carnival, fun, high energetic atmosphere.

DIM: 0.0% -100%
Switch: Turn on/off the effect
Speed: 1-100
SAT: 0%-100%

parameter. Select manual, the effect can be triggered once by pressing the select dial once. After a certain effect is set, press MODE button can return to the 14 effects interface.


MENU Settings

Press the MENU button to enter menu interface, rotate and press the select dial to enter the following setting options, press the MENU button can return to the previous interface.

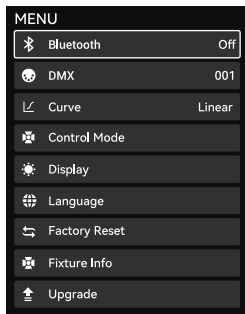

1. Bluetooth

Short press the select dial to enter Bluetooth interface, press and rotate the select dial to Bluetooth to turn it on or off. If you need to reset the Bluetooth, rotate the select dial to reset and press it. The MAC code is on the corner for quick check.

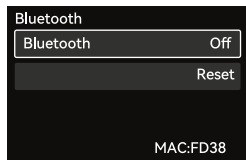

"GODOX Light" app Downloading

Scan the QR code to download the "Godox Light" smartphone app (can be used in Android and iOS).





Note:

1. The app can be used directly on the firstly installed device (smartphone or tablet). When change to other mobile device (smartphone or tablet), the light shall be reset before the normal connection of the app.
2. The app should be version 3.0 or above.

2.DMX

Short press the select dial to enter DMX interface, press and rotate the select dial to adjust the following settings.

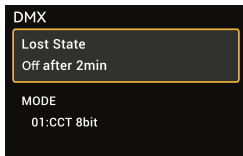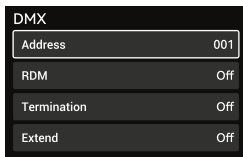


Level 1 Option	Level 2 Option	Description
Address	001-512	Initial address
RDM	On	Turn on RDM, the controller can set the fixture address and DMX mode
	Off	Turn off RDM
Termination	On	Turn on DMX terminal
	Off	Turn off DMX terminal
Extend	On	Turn on extend DMX channels
	Off	Turn off extend DMX channels
Lost State	Hold Last Command	After the DMX control signal is lost, continue to use the last received DMX control signal until power down or a valid DMX control signal is received again.
	Black Out	The light is off immediately.
	Off After 2 min	After the DMX control signal is lost, continue to use the last received DMX control signal for 2 minutes then black out. Note: If a valid DMX control signal is received within 2 minutes, then use the new DMX control signal.
MODE	01: CCT 8 Bit	CCT mode in 8bit
	02: HSI 8 Bit	HSI mode in 8bit
	03: RGB 8 Bit	RGB mode in 8bit
	04: RGBW 8 Bit	RGBW mode in 8bit
	05: CCT+HSI 8 Bit	CCT+HSI mode in 8bit
	06: CCT+RGBW 8 Bit	CCT+RGBW mode in 8bit
	07: FX 8 Bit	FX 8 mode in 8bit
	08: GEL 8 Bit	GEL mode in 8bit
	09: CCT 16 Bit	CCT mode in 16bit
	10: HSI 16 Bit	HSI mode in 16bit
	11: RGB 16 Bit	RGB mode in 16bit
	12: RGBW 16 Bit	RGBW mode in 16bit
	13: FX 16 Bit	FX mode in 16bit
	14: GEL 16 Bit	GEL mode in 16bit
	15: ULTIMATE 8 Bit	ULTIMATE mode in 8bit
	16: ULTIMATE 16 Bit	ULTIMATE mode in 16bit

Note: Please refer to the DMX mode specification to control the device by DMX/RDM. The electronic version can be downloaded from the official website <https://www.godox.com>.


3.Curve

Short press the select dial to enter curve interface, press and rotate the select dial to select among linear, S-curve, exponential and logarithmic.

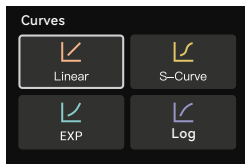

4.Control Mode


Short press the select dial to enter control mode interface, press and rotate the select dial to choose the mode between normal and low end, then press and rotate the select dial can adjust the frequency from 1 to 11.

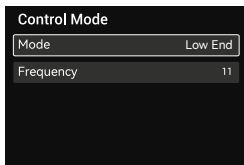

Control Mode	Suitable Environment	Dimming Feature	Blink
Normal	Normal dimming	Proper in the whole dimming range	Unlikely
Low End	TV series/Movie	Proper in low dimming	Probably

5.Display

Short press the select dial to enter display interface, press and rotate the select dial to adjust the display brightness from 10% to 100%.

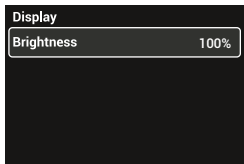


6.Language

Short press the select dial to enter language interface, press and rotate the select dial to choose between simplified Chinese and English.




7.Factory Reset

Short press the select dial to enter factory reset interface to choose confirm or cancel. If you choose confirm, the device will automatically reset and reboot, then simplified Chinese and English options show on the display for your choice, after which the brightness will turn to 100% automatically.

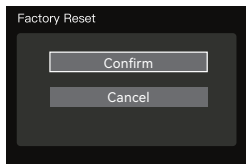

8.Fixture Info

Short press the select dial to enter fixture info interface to check the basic fixture information of the controller.

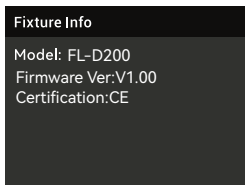

9.Upgrade

Short press the select dial to enter upgrade interface to check the upgrade instruction.

1. Download the new firmware to the U disk from official website (<https://www.godox.com/firmware-continuous-light>).
2. Turn off the device. Insert the U disk with new firmware into the USB-A port.
3. Turn on the device, and it will automatically enter the upgrading interface.
4. It will return to main interface after completion.


Notes:

1. New firmware must be downloaded from the official website, and keep only one BIN file in the root directory of the USB disk.
2. The USB-A port can only support output voltage and current of 5V \leq 1A. Do not connect to over-rated USB device.

NFC Addition

Use the NFC function of smartphone and NFC chip of the light fixture to connect them, then add the light fixture to **【Godox Light】** app.

1. Preconditions: light fixture supports NFC addition, **【Godox Light】** app is V3.2.4 or above, Bluetooth and NFC functions of smartphone are turned on.
2. Operation Instructions: subject to the fulfillment of preconditions, turn on the **【Godox Light】** app and enter the corresponding scene, click **【+】** to select **【NFC Addition】** function, bring the NFC sensing area of smartphone near the sensing area of light fixture to scan to add in **【NFC Addition】** interface, bulk addition is also supported.

Note: Android systems can complete the addition by directly closing the sensing area, while iOS system need to click the  icon on the right top and wait for the pop-up window then add.

Illuminance Data

FL100R

CCT	Testing Condition	Unit	1m	2m	3m
1800K	Bare Light	lux	909	224	103
		fc	85	21	10
2800K		lux	2,840	688	327
		fc	264	64	30
3200K		lux	3,320	3,214	385
		fc	308	805	36
4300K		lux	4,630	1,110	535
		fc	96	103	50
5600K		lux	4,090	983	472
		fc	380	91	44
6500K		lux	3,550	848	413
		fc	330	79	38
7500K		lux	3,160	755	369
		fc	294	70	34
8500K		lux	3,270	772	380
		fc	303	72	35
10000K		lux	3,430	810	401
		fc	319	75	37
R		lux	329	88	40
		fc	31	8	4
G		lux	1,110	286	134
		fc	103	27	13
B		lux	161	38	19
		fc	15	4	2

FL200R、FL200SR

CCT	Testing Condition	Unit	1m	2m	3m
1800K	Bare Light	lux	2,580	720	340
		fc	240	67	32
2800K		lux	4,830	1,390	652
		fc	448	129	61
3200K		lux	5,630	1,610	764
		fc	523	149	72
4300K		lux	7,490	2,180	1,020
		fc	696	202	95
5600K		lux	7,050	2,050	959
		fc	655	190	89
6500K		lux	6,130	1,790	836
		fc	569	166	78
7500K		lux	5,460	1,590	746
		fc	507	148	69
8500K		lux	5,560	1,620	758
		fc	517	150	70
10000K		lux	5,650	1,650	773
		fc	525	153	72
R		lux	700	215	139
		fc	65	20	13
G		lux	1,650	550	199
		fc	155	51	19
B		lux	366	103	94
		fc	34	10	9

Note: All the data are average values instead of absolute values. All the above tests are based on the condition of 100% brightness.

Technical Data

Controller

Model	FL-D200
AC INPUT Port	100-240V ~ 50/60Hz 250W
CCT Range	1800K-10000K
GM Adjust	-100% -100%
Brightness Range	0.0% -100.0%
Dimming Curves	linear, S-curve, exponential, logarithmic
CRI	≈ 95
TLCI	≈ 95
Controlling Methods	Wired DMX and RDM/Bluetooth app/Controller Control
Bluetooth Controlling Distance	30m
USB-A Port	Firmware Upgrade//5V ≡ 1A Power Supply
Working Environment Temperature	-20°C ~ 45°C
Dimension	≈4.09"*2.95"*6.3"
Net Weight	≈0.85kg

Light Body

Model	FL100R	FL200R	FL200SR
Dimension of Bare Light ≈	13.54"*25.04"	25.08"*25.08"	13.54"*48.03"
Net Weight of Bare Light ≈	0.6kg	1kg	1.05kg

Specifications and data may subject to changes without notice.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.

Warning

Operating frequency: 2402MHz – 2480MHz (BT)
Maximum EIRP Power: 5dBm

Declaration of Conformity

GODOX Photo Equipment Co.,Ltd. hereby declares that this equipment are in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. In accordance with Article 10(2) and Article 10(10), this product is allowed to be used in all EU member states. For more information of DoC, Please click this web link:

<https://www.godox.com/eu-declaration-of-conformity/>

The device complies with RF specifications when the device used at 0mm from your body.

IC Warning

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement

Tout changement ou modification non expressément approuvé par la partie responsable de la réglementation de l'OCDE peut faire perdre à l'utilisateur le droit d'utiliser l'appareil.

Remarque: cet appareil a été testé pour répondre aux limites des appareils numériques de classe B conformément à la partie 15 des règles de la Federal Communications Commission des États - Unis. Ces limites sont conçues pour fournir une protection raisonnable contre les interférences nuisibles dans les installations résidentielles. L'appareil génère de l'énergie RF utilisée et rayonne, ce qui peut causer des interférences nocives pour les communications radio s'il n'est pas installé et utilisé conformément aux instructions. Cependant, aucune Garantie contre les interférences dans une installation spécifique. Si l'appareil cause des interférences nuisibles à la réception de la radio ou de la télévision, qui peuvent être déterminées en éteignant et en allumant l'appareil, l'utilisateur est encouragé à tenter de corriger les interférences par une ou plusieurs des mesures suivantes:

- redirection ou repositionnement de l'antenne de réception.
- augmenter l'espacement entre l'appareil et le récepteur.
- Connecter l'appareil à une prise sur un circuit différent de celui auquel le récepteur est connecté.
- consultez votre revendeur ou un technicien radio / tv expérimenté pour obtenir de l'aide.

Avertissement RF pour les appareils portables:

L'appareil a été évalué pour répondre aux exigences générales d'exposition aux radiofréquences. Équipement Peut être utilisé sans restriction dans des conditions d'exposition portables.

产品保修

尊敬的用户, 本保修卡是申请保修服务的重要凭证, 请您配合销售商填写并妥善保管, 谢谢!

产品信息	型号	产品条码
用户信息	姓名	联系电话
	通信地址	
销售商信息	名称	
	联系电话	
	通信地址	
	销售日期	
备注		

注: 此表应由销售商盖章确认。

产品信息

本文件适用于相关《产品保修信息》(见后面说明)所列产品,其他非属此范围的产品或部件(如促销品、赠品及其他出厂后附加的部件等)不在此保修承诺内。

保修期

产品及部件的相应保修期按相关的《产品保修信息》执行。保修期自产品首次购买日起算, 购买日以购买产品时保修卡登记日期为准。

如何获得保修服务

您可直接与产品销售商或授权服务机构联系, 也可拨打神牛产品售后服务电话, 与我们联系, 由我们的服务人员为您安排服务。申请保修时, 您应提供有效的保修卡作为保修凭证, 方可获得保修。如您不能提供有效的保修卡, 则在我们确认产品或部件属于保修范围的情况下, 也可以为您提供保修, 但这不作为我们的义务。

不适用保修情况

如产品存在下列情况，本文件项下的保证和服务将不适用：①产品或部件超过相应保修期；②错误或不适当使用、维护或保管导致的故障或损坏，如：不当搬运；非按产品合理预期用途使用；不当插拔外接设备；跌落或外力挤压；接触或暴露于不适当温度、溶剂、酸碱、水浸或潮湿环境；③由非神牛授权机构或人员安装、修理、更改、添加或拆卸造成的故障或损坏；④产品或部件原有识别信息被修改变更或删除；⑤无有效保修卡；⑥使用非合法授权、非标准或非公开发行的软件造成的故障或损坏；⑦因不可抗力或意外事件造成的故障或损坏；⑧其他非因产品本身质量问题导致的故障或损坏。遇上述情况，您应向相关责任方寻求解决，神牛对此不承担任何责任。因非在保修期或保修范围内的部件、附件或软件导致产品不能正常使用的，不是保修范围内的故障。产品使用过程中正常的脱色，磨损和消耗，不是保修范围内的故障。

产品保修和服务支持信息

产品的保修期和服务类型按以下《产品保修信息》执行：

产品类别	选件名称	保修期（月）	保修服务类型
部件	电路板	12	客户送修
其他	柔光附件、线材、锁紧装置、包装等。	无	无保修

神牛产品售后服务电话 0755-29609320-8062

Warranty

Dear customers, as this warranty card is an important certificate to apply for our maintenance service, please fill in the following form in coordination with the seller and safe-keep it. Thank you!

Product Information	Model	Product Code Number
Customer Information	Name	Contact Number
	Address	
Seller Information	Name	
	Contact Number	
	Address	
	Date of Sale	
Note		

Note: This form shall be sealed by the seller.

Applicable Products

Applicable ProductsThe document applies to the products listed on the Product Maintenance Information (see below for further information). Other products or accessories (e.g. promotional items,giveaways and additional accessories attached,etc.) are not included in this warranty scope.

Warranty Period

The warranty period of products and accessories isimplemented according to the relevant Product Maintenance Information. The warranty period is calculated from the day(purchase date) when the product is bought for the first time,And the purchase date is considered as the date registered onthe warranty card when buying the product.

How to Get the Maintenance Service

If maintenance service is needed, you can directly contact the product distributor or authorized service institutions. You can also contact the Godox after-sale service call and we will offer you service. When applying for maintenance service, you should provide valid warranty card. If you cannot provide valid warranty card, we may offer you maintenance service once confirmed that the product or accessory is involved in the maintenance scope, but that shall not be considered as our obligation.

Inapplicable Cases

The guarantee and service offered by this document are not applicable in the following cases:

① The product or accessory has expired its warranty period; ② Breakage or damage caused by inappropriate usage, maintenance or preservation, such as improper packing, improper usage, improper plugging in/out external equipment, falling off or squeezing by external force, contacting or exposing to the improper temperature, solvent, acid, base, flooding and damp environments, etc; ③ Breakage or damage caused by non-authorized institution or staff in the process of installation, maintenance, alternation, addition and detachment; ④ The original identifying information of product or accessory is modified, alternated, or removed; ⑤ No valid warranty card; ⑥ Breakage or damage caused by using illegally authorized, nonstandard or non-public released software; ⑦ Breakage or damage caused by force majeure or accident; ⑧ Breakage or damage that could not be attributed to the product itself. Once met these situations above, you should seek solutions from the related responsible parties and Godox assumes no responsibility. The damage caused by parts, accessories and software that beyond the warranty period or scope is not included in our maintenance scope. The normal discoloration, abrasion and consumption are not the breakage within the maintenance scope.

Maintenance and Service Support Information

The warranty period and service types of products are implemented according to the following Product Maintenance Information:

Product Type	Name	Maintenance Period(month)	Warranty Service Type
Parts	Circuit board	12	Customer sends the product to designated site
Other Items	Diffuser, cable, locking device, package, etc.	No	Without warranty

Godox After-sale Service Call +86-755-29609320(8062)



Wechat
Official Account
神牛微信公众号

深圳市神牛摄影器材有限公司

地址：深圳市宝安区福海街道塘尾社区耀川工业园厂房 2 栋
电话：0755-29609320 (8062) 传真：0755-25723423 邮箱：godox@godox.com

GODOX Photo Equipment Co., Ltd.

Add.: Building 2, Yaochuan Industrial Zone, Tangwei Community, Fuhai Street, Bao'an District, Shenzhen
518103, China Tel: +86-755-29609320(8062) Fax: +86-755-25723423 E-mail: godox@godox.com

www.godox.com

Made in China | 705-FL10R1-00

合格证
QC PASS

UK
CA

C E

FC

