

## C100 固件说明

一、将 TF 卡装入读卡器，插入电脑，打开“我的电脑”，打开 U 盘（TF 卡格式需为 FAT32 或 exFAT）；



二、将下载好的固件文件放至 TF 卡初始目录中（根目录）；




三、将 TF 卡插入 C100，重启 C100，指示灯闪烁，开始更新固件；

四、升级过程 10 秒左右，指示灯停止闪烁并自动关机，固件升级成功。


注：升级过程中，请勿操作设备或插拔 TF 卡

## C100 Firmware Update Instructions

Step 1: Insert the TF card into a card reader and plug it into your computer. Open "My Computer" (or "This PC") and locate the removable disk. Note: Ensure the TF card is formatted to FAT32 or exFAT.

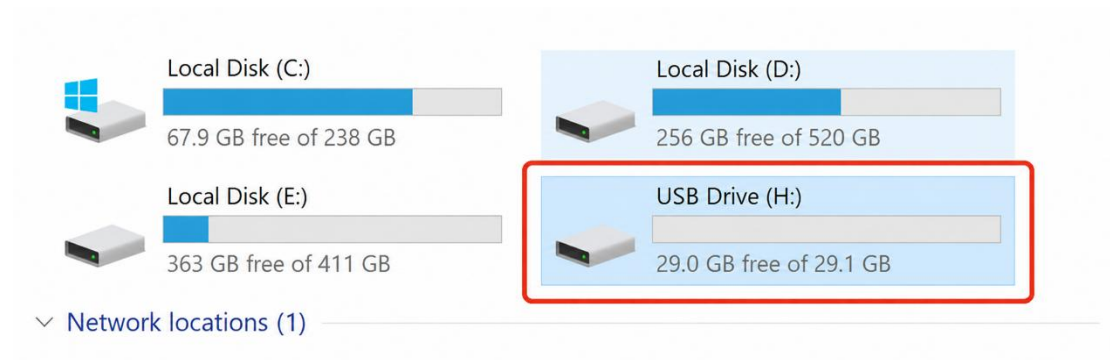

Step 2: Copy the downloaded firmware file and paste it directly into the initial directory (root directory) of your TF card.

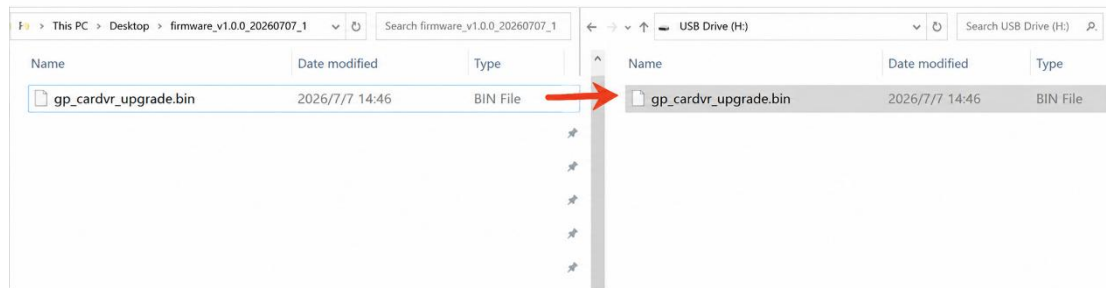

Step 3: Insert the TF card back into the C100. Restart the device. The indicator light will begin to flash, signaling that the firmware update has started.

Step 4: The upgrade process takes about 10 seconds. Once the indicator light stops flashing and the device automatically powers off, the firmware update is successful.

Note: Do not operate the device, remove the TF card, or disconnect anything during the upgrade process to prevent data corruption.