

HSA-S/C

相机热靴转接件

Multi Interface Shoe Adapter

使用手册
Instruction Manual

前言

感谢您选择神牛 (Godox) 产品！

HSA 相机热靴转接件是一款适用于索尼 / 佳能相机数字音频收音的工具，可以通过与神牛 USB-C 接口麦克风接收器搭配工作，无需使用相机连接线即可实现数字音频收音。

HSA-S 适用于索尼相机

HSA-C 适用于佳能相机

注：其他品牌相机不适用。

使用本产品之前，请仔细阅读说明书，以便正确使用。

主要特点

- 热靴直连，快捷高效；
- 数字音频信号，抗干扰性更强。

适用产品及兼容相机

适用产品

适用但不限于神牛 USB-C 接口的麦克风接收器(如 Alink, C01 系列等)，推荐搭配 Alink RX 使用效果更佳。

兼容相机

HSA-S 支持 Mi 热靴数字音频传输的索尼相机。


HSA-C 支持热靴数字音频传输的佳能相机。

(具体适配机型请以实际使用为准)


警告

- 请勿私自拆卸、改装或尝试维修本产品。产品如出现故障须由本公司或授权的维修人员进行检查维修。
- 请勿让儿童接触本产品，以避免发生意外。
- 禁止拆解、撞击、挤压或投入火中。
- 本产品不防水，请保持干燥，不能浸入水或其他液体中。

部件名称

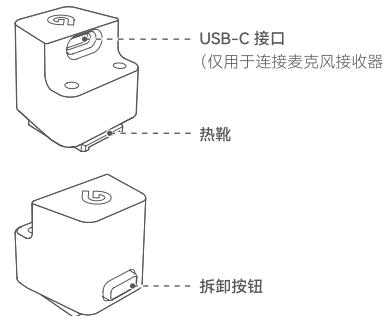


物品清单

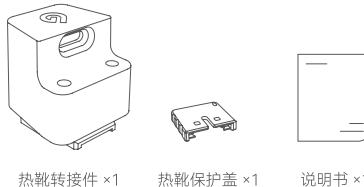


使用指南

- 将接收器正面朝上插入热靴转接件的 USB-C 接口，直至稳固。

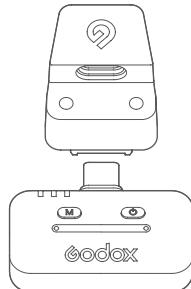

- 将转接件的热靴保护盖取下，插入相机热靴即可完成安装。

按住 < 拆卸按钮 >，同时将转接件往外拔出，即可完成拆卸。

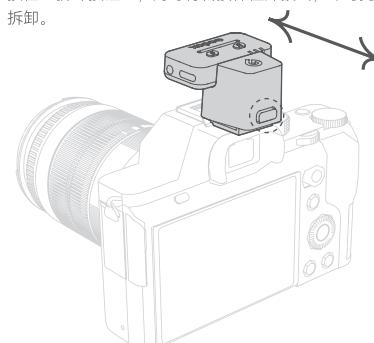

规格参数

名称	尺寸	重量
相机热靴转接件 HSA-S	26×27×29mm	≈ 11g
相机热靴转接件 HSA-C	26×30×29mm	≈ 20g

产品保修和服务支持信息

产品的保修期和服务类型按以下《产品保修信息》执行：

产品类型	选件名称	保修期(月)	保修服务类型
部件	主机	12	客户送修
其他	外壳、热靴保护盖、包装等	无	无保修

神牛产品售后服务电话 0755-29609320-8062

产品保修

尊敬的用户，本保修卡是申请保修服务的重要凭证，请您配合销售商填写并妥善保管，谢谢！

产品信息	型号	产品条码
用户信息	姓名	联系电话
	通讯地址	
销售商信息	名称	
	联系电话	
	通讯地址	
	销售日期	
备注		

注：此表应由销售商盖章确认。

产品信息

产品及部件的相应保修期按相关的《产品保修信息》执行。保修期自产品首次购买日起算，购买日以购买产品时保修卡登记日期为准。

保修期

本文件适用于相关《产品保修信息》(见后面说明) 所列产品，其他非属此范围的产品或部件(如促销品、赠品及其他出厂后附加的部件等) 不在此保修承诺内。

如何获得保修服务

要保修服务，您可直接与产品销售商或授权服务机构联系，也可拨打神牛产品售后服务电话，与我们联系，由我们的服务人员为您安排服务。申请保修时，您应提供有效的保修卡作为保修凭证，方可获得保修。如您不能提供有效的保修卡，则在我们可确认产品或部件属于保修范围的情况下，也可以为您提供保修，但这不作为我们的义务。

不适用保修的情况

如产品存在下列情况，本文件项下的保证和服务将不适用①产品或部件超过相应保修期；②错误或不适当使用、维护或保管导致的故障或损坏，如：不当搬运；非按产品合理预期用途使用；不当插拔外接设备；跌落或外力挤压；接触或暴露于不适当温度、溶剂、酸碱、水浸或潮湿环境；③由非神牛授权机构或人员安装、修理、更改、添加或拆卸造成的故障或损坏；④产品或部件原有识别信息被修改变更或除去；⑤无有效保修卡；⑥使用非法授权、非标准或非公开发行的软件造成的故障或损坏；⑦因不可抗力或意外事件造成的故障或损坏；⑧其他非因产品本身质量问题导致的故障或损坏。遇上述情况，您应向相关责任方寻求解决，神牛对此不承担任何责任。因非在保修期或保修范围内的部件、附件或软件导致产品不能正常使用的，不是保修范围内的故障。产品使用过程中正常的脱色、磨损和消耗，不是保修范围内的故障。

合格证
QC PASS

Godox Audio Wechat
Official Account
Godox Official
神牛影音微信公众号

Overseas Official
Accounts & Updates
神牛海外社交媒体及资讯

深圳市神牛摄影器材有限公司
地址：深圳市宝安区福海街道塘尾社区耀川工业园厂房2栋
电话：0755-29609320(8062) 传真：0755-25723423
邮箱：godox@godox.com

GOODOX Photo Equipment Co., Ltd.
Add: Building 2, Yizhuan Industrial Zone, Tangwei Community, Fuhai Street,
Bao'an District, Shenzhen 518103, China Tel: +86-755-29609320(8062)
Fax: +86-755-25723423 E-mail: godox@godox.com

www.godox.com

Made in China | 705-HSAS00-00



Foreword

Thank you for purchasing!

Multi interface shoe adapter HSA is designed for digital audio recording with Sony/Canon cameras. It works in conjunction with the Godox USB-C microphone receiver, enabling digital audio recording without the need for camera cables.

HSA-S is suitable for Sony cameras.

HSA-C is suitable for Canon cameras.

Note: Cameras of other brands is not compatible.

Please read this manual carefully before using to make sure the correct operation and exert the optimum function.

Main Features

- Hot shoe direct connection for quick and efficient operation.
- Digital audio signal for enhanced interference resistance.

Compatible Products

Microphones

Compatible with but not limited to, Godox USB-C microphone receivers (such as Alink and C01 series, etc.). For optimal performance, pairing with Alink RX is recommended.

Cameras

HSA-S is compatible with Sony cameras that support multi interface shoe digital audio transmission.

HSA-C is compatible with Canon cameras that support hot shoe digital audio transmission.

(Please refer to actual usage for specific compatibility)

Warning


⚠ Do not disassemble. Should repairs become necessary, this product must be sent to our Company or an authorized maintenance center.

⚠ Keep out of reach of children.


⚠ Do not disassemble, strike, crush, or expose to fire.

⚠ This product is not waterproof. Keep it dry and do not immerse it in water or other liquids.

Name of Parts

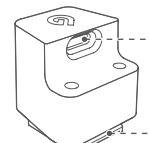


USB-C Port
(Connect to microphone receiver only)

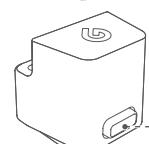

Multi Interface Shoe


Detaching Button

What's Inside

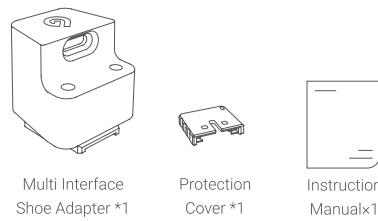


Using Instructions

1. Insert the receiver face-up into the USB-C port of the multi interface shoe adapter until it locks securely.

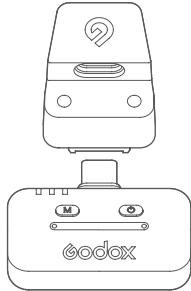

2. Remove the adapter's protection cover and attach it to the camera's hot shoe mount.

To detach, press and hold the detaching button while pulling the adapter outward.

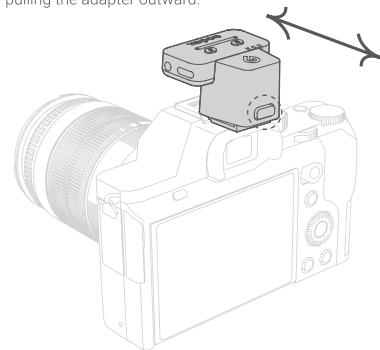

Technical Data

Name & Model	Dimension	Net Weight
Multi Interface Shoe Adapter HSA-S	1.02" x 1.06" x 1.14"	~11g
Multi Interface Shoe Adapter HSA-C	1.02" x 1.18" x 1.14"	~20g

Specifications and data may subject to changes without notice.

Declaration of Conformity

GODOX Photo Equipment Co.,Ltd. hereby declares that this equipment are in compliance with the essential requirements and other relevant provisions of Directive 2014/30/EU. They are allowed to be used in all EU member states.

For more information of DoC, Please click this web link: <https://www.godox.com/eu-declaration-of-conformity/>

FCC Statement

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IC Warning

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference, and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement

Warranty

Dear customers, as this warranty card is an important certificate to apply for our maintenance service, please fill in the following form in coordination with the seller and safe-keep it. Thank you!

Product Information	Model	Product Code Number
Customer Information	Name	Contact Number
	Address	
Seller Information	Name	
	Contact Number	
	Address	
	Date of Sale	
Note		

Note: This form shall be sealed by the seller.

Applicable Products

The document applies to the products listed on the Product Maintenance information (see below for further information). Other products or accessories (e.g. promotional items, giveaways and additional accessories attached, etc.) are not included in this warranty scope.

Warranty Period

The warranty period of products and accessories is implemented according to the relevant Product Maintenance Information. The warranty period is calculated from the day (purchase date) when the product is bought for the first time, and the purchase date is considered as the date registered on the warranty card when buying the product.

How to Get the Maintenance Service

If maintenance service is needed, you can directly contact the product distributor or authorized service institutions. You can also contact the Godox after-sale service call and we will offer you service. When applying for maintenance service, you should provide valid warranty card. If you cannot provide valid warranty card, we may offer you maintenance service once confirmed that the product or accessory is involved in the maintenance scope, but that shall not be considered as our obligation.

Inapplicable Cases

The guarantee and service offered by this document are not applicable in the following cases: ① The product or accessory has expired its warranty period; ② Breakage or damage caused by inappropriate usage, maintenance or preservation, such as improper packing, improper usage, improper plugging in/out external equipment, falling off or squeezing by external force, contacting or exposing to the improper temperature, solvent, acid, base, flooding and damp environments, etc; ③ Breakage or damage caused by non-authorized institution or staff in the process of installation, maintenance, alternation, addition and detachment; ④ The original identifying information of product or accessory is modified, altered, or removed; ⑤ No valid warranty card; ⑥ Breakage or damage caused by using illegally authorized, nonstandard or non-public released software; ⑦ Breakage or damage caused by force majeure or accident; ⑧ Breakage or damage that could not be attributed to the product itself. Once met these situations above, you should seek solutions from the related responsible parties and Godox assumes no responsibility. The damage caused by parts, accessories and software that beyond the warranty period or scope is not included in our maintenance scope. The normal discoloration, abrasion and consumption are not the breakage within the maintenance scope.

Maintenance and Service Support Information

The warranty period and service types of products are implemented according to the following Product Maintenance Information:

Product Type	Name	Maintenance Period(month)	Warranty Service Type
Parts	Product Main Body	12	Customer sends the product to designated site
Other Items	Shell, Hot Shoe Protective Cover, Package etc.	No	Without warranty

Godox After-sale Service Call 0755-29609320-8062