Godox

TTL锂电机顶闪光灯 TTL Li-ion Camera Flash

V860IIN



合格证 QC PASS

深圳市神牛摄影器材有限公司

地址: 深圳市宝安区福海街道塘尾社区編川工业区厂房2栋 电话: 0755-29609320(8062) 传真: 0755-25723423 邮箱: godox@godox.com

GODOX Photo Equipment Co., Ltd.

Add.: Building 2, Yaochuan Industrial Zone, Tangwei Community, Fuhai Street, Bao'an District, Shenzhen 518103, China Tel: +86-755-29609320(8062) Fax: +86-755-25723423 E-mail: god@godox.com

godox.com

Made in China



在使用本产品之前:

请先仔细阅读本手册,以确保您能安全使用。请保存好本手册以备将 来查询参考。

说明手册INSTRUCTION MANUAL

Before using this product:

Please read this user manual carefully in order to ensure your safety and the proper operation of this product. Keep for future reference.

前言

感谢您购买神牛产品。

该型号机顶闪光灯适用于Nikon系列相机,兼容i-TTL自动闪光。 使用i-TTL闪光灯。您将获得更简单的拍摄体验,在光线变化复杂的 情况下,可以自动获得准确的闪光曝光,拍摄轻松自如。产品特点突 出表现在以下几方面:

- GN60 (m ISO 100, @200mm), 22级调光(1/1~1/128)
- 专业锂电,优质体验

2000mAh锂聚合物电池,全功率650次闪光,1.5秒快速回电,便携性无与伦比。

● 兼容尼康i-TTL

支持i-TTL自动闪光,可作为无线多灯闪光系统的主控或从属 单元,拍摄更简单快捷

• 点阵液晶屏

显示直观,操作更加简易

● 内置2.4G无线传输

收发一体, 超远距离, 创意无限

• 无线功率遥控触发

选购FT-16S遥控器,可对离机闪光灯进行无线功率调节等参数设置,同时触发引闪

• 功能齐全, 无限享用

支持手动和频闪闪光模式,高速同步/第二帘快门同步/闪光曝 光补偿等i-TTL功能

• 光学研究, 输出稳定

高速连闪,每次输出亮度和色温连续一致(5600±200K),光线 均匀分布

• 固件升级, 兼容无忧

跟随原厂相机步伐,可对软件进行再升级

▲ 警告

- ▲ 请保持干燥。
- ▲ 请勿私自拆卸产品,如产品出现故障须由本公司或授权的维修人 员进行检查维修。
- ▲ 请勿让儿童接触本产品。
- ▲ 禁止拆卸、撞击、挤压或投入火中,若出现严重鼓胀,请勿继续使用。请勿放置在超过50度的高温环境中。
- ▲ 请勿将闪光灯头正对人眼闪光(特别是婴儿的眼睛), 否则可能会 在短时间内造成视力障碍。
- ▲ 请勿在化学品、可燃性气体或其他特殊物质附近使用闪光灯,这些物质在特殊情况下可能对闪光灯发出的瞬间强光敏感,有可能导致火灾或电磁干扰。在这些场合下,请注意相关警告标识。
- ▲ 本产品不能防水,在雨天及潮湿环境下请注意防水。
- ▲ 若发生任何故障,请立即关闭闪光灯电源。

- 01 -

目录

01	刑言
02	警告
05	部件名称
	机身
	控制面板
	LCD液晶显示屏
	套装标配物品
	单灯标配物品
	可选购附件
08	电池
09	装卸闪光灯
09	电源管理
10	闪光模式 — i-TTL自动闪光模式
	32 闪光曝光补偿
	知 高速同步
	☆ 第二帝快门同步
12	闪光模式 — M: 手动闪光
13	闪光模式 — RPT: 频闪闪光
14	无线闪光拍摄: 光学传输
	无线设置
	设置主控闪光灯的闪光模式
	设置通讯频道
	i-TTL: 全自动无线闪光拍摄
	M: 手动无线闪光拍摄
	RPT: 手动无线闪光拍摄
18	无线闪光拍摄: 无线电(2.4G)传输
	无线设置
	设置主控闪光灯的闪光模式
	设置通讯频道
	无线ID设置
	i-TTL: 全自动无线闪光拍摄
	M: 手动无线闪光拍摄
	RPT: 手动无线闪光拍摄
23	其他应用
	外置无线控制功能
	同步插孔触发
	造型闪光
	自动辅助对焦灯
	反射闪光
	创建眼神光
	ZOOM: 设置闪光覆盖范围并使用广角散光板
	电池电量低警示
26	C.Fn: 设置自定义功能
27	保护功能
28	规格参数
29	故障排除指南
30	固件升级
30	事 容相机列表



本说明书中使用的约定

- 此使用说明书中的操作步骤假定相机和闪光灯的电源开关已开启。
- 参考页码由(第**页)表示。
- 此使用说明书中使用以下警告符号:

▲ 该"小心"符号表示避免出现拍摄问题的警告。

▮ 该 "注意" 符号提供补充信息。

- 03 -

30

维护保养

部件名称



• 机身

01. 眼神光板

02. 内置广角散光板


03. 闪光灯头

04. 无线传感器

05. 辅助对焦灯

06. 同步插孔

- 08. 热靴
- 09. 点阵液晶显示屏
- 10. 固定旋钮
- 11. 电池仓
- **12.** USB端口
- 13. 从属单元状态指示灯
- 07. 无线控制插座

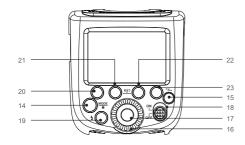

● 控制面板

14. < MODE > 闪光模式选择按钮 /锁定按钮

15. < ⁴┸▶ >无线按钮

16. 调节旋钮

17. <SET>设置按钮

18. ON/OFF电源开关

20. 功能按钮1 21. 功能按钮2


19. < 4 >试闪按钮/回电指示灯

22. 功能按钮3

23. 功能按钮4

● LCD液晶显示屏

(1)i-TTL自动闪光

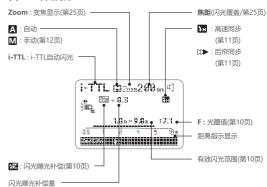

- ● 显示屏将只显示当前应用的设置。
 - 在功能按钮1至功能按钮4上方显示的功能(如< SYNC >和
 - < 14 >)根据设置的状态发生变化。
 - 当操作按钮或拨盘时,液晶显示屏点亮。

(2)M手动闪光




(3)RPT频闪闪光



- 05 -- 06 -

(4)无线电传输拍摄/光学传输无线拍摄

• 主控单元

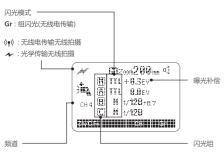

• 从属单元



• 套装标配物品

- 1、灯体 2、锂电池 3、电池充电器 4、充电器电源线
- 5、微型底座 6、保护包 7、说明书

• 单灯标配附件

1、灯体 5、微型底座 6、保护包 7、说明书



• 可选购附件

可搭配本公司以下摄影附件使用,以获得最佳的拍摄效果和使用体验: X1N TTL引内器、FT-16S功率遥控器、迷你柔光箱、反光板、



电池

特性

- 1. 本品采用锂聚合物电池, 支持反复充放电500次, 使用寿命长;
- 2. 安全可靠,内置电路有过充保护、过放保护、过流保护、短路保护;
- 3. 使用标配电池充电器只需2.5个小时左右。

• 注意事项


- 1. 避免正负极短路;
- 2. 电池没有防水功能,不要把电池浸泡在雾、水中;
- 3. 放置于儿童不易接触的地方;
- 4. 电池充电不要放置超过24小时;
- 5. 电池应放置于凉爽、干燥及通风的地方存储;
- 6. 电池不要靠近和放置于火中;
- 7. 电池使用报废后请按当地的规定处理;
- 8. 如果电池超过3个月不使用,请对电池进行满电充电。

• 装卸电池



1 打开电池仓盖。

用您的拇指按电池仓盖, 然后滑动电池仓盖将电池 仓盖打开。

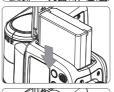

安装电池。

按电池指示方向将锂电池 插入电池仓,直至扣件卡 住,关闭电池仓盖即可。



拆卸电池。

打开电池仓,往右轻推扣件直至锂电池弹出。


- 07 -

• 电池电量指示

把锂电池正确安装在闪光灯上,即可给闪光灯供电。使用时请查看闪 光灯屏幕上电池图标,即可随时掌握电量状态。


电池电量显示	意义
3格	满电
2格	中电
1格	低电
无格	电量少, 请及时充电。
无格闪烁	电量即将用尽,此状态不支持闪光灯工作。 注:此状态请尽快(10天内)充电,才可使用或放置。

装卸闪光灯

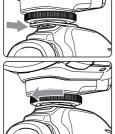

安装闪光灯。

• 滑动闪光灯固定座使其完 全插入相机的热靴插座。

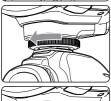

拧紧闪光灯。

• 旋转固定座上的锁定旋 钮,直到锁定闪光灯。



取下闪光灯。

• 旋转固定座上的锁定旋钮, 直到闪光灯解除锁定。

电源管理

* ON/OFF电源开关控制该产品的打开和关闭,长时间不使用时请关 闭电源。本产品设计有电源自动关闭功能。作为主控单元在长时间 (约90秒) 无人操作时,闪光灯会自动关闭,半按快门按钮或机身任 意键唤醒;作为从属单元在60分钟(或者选择30分钟)无任何操作 时,闪光灯会进入休眠状态,此时可按机身任意键唤醒。

- **C.Fn** 离机使用时,建议通过自定义功能使"自动关闭电源" 无效。(C.Fn-APO 第26页)
 - C.Fn "从属单元自动关闭电源计时器"出厂默认设置为60分 钟,也可自定义选择30分钟。(C.Fn-SvAPOT 第26页)

闪光模式: i-TTL自动闪光模式

该闪光灯有i-TTL自动闪光, M手动闪光, RPT频闪闪光三种模式。 在i-TTL模式下, 相机的测光系统会侦查从主体反射回来的闪光照 明,从而自动调节闪光输出量,使主体和背景得到均衡曝光。支持曝 光补偿、高速同步、第二帘快门同步、光圈预览造影闪光等功能。 *按下< MODE >模式选择按钮, 三种闪光模式将会依次出现在液 晶屏上。

i-TTL模式

通过按< MODE >模式选择按钮, 将闪光灯设置为<i-TTL >, 可以使 闪光灯讲入i-TTL模式。

- 半按相机快门按钮进行对焦,光圈值和有效闪光范围将会显示在显
- 在快门释放前的瞬间讲行—次预闪,闪光灯接收相机信息讲行主闪 光。


52 闪光曝光补偿

该闪光灯可以在±3档间以1/3档为增量调节闪光曝光补偿。由于环境 的需求而需要微调TTL系统时,这个功能非常有用。

设置闪光曝光补偿:



按下功能按钮2< 4± >, 令屏幕显示 < 🛂 > 图标, 并 且闪光曝光补偿量被突出显

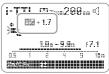



- 设置闪光曝光补偿量。
- 转动调节旋钮设置曝光补 偿量。
 - "0.3"表示1/3档, "0.7"表 示2/3档。
 - 要取消闪光曝光补偿,将 闪光曝光补偿量设为 "+0"。
- 按下< SET >设置按钮,确 定闪光曝光补偿。

- 09 -- 10 -

3 高速同步

使用高速同步(FP闪光), 您可以在所有的快门速度下同步使用闪光 灯。高速同步模式下, 使用光圈优先对人像进行填充闪光时特别方 便。

选择高速同步 < 7 >。



- 在尼康相机机身设置中,将闪光 同步速度设置为1/320秒(自动 FP)或1/250秒(自动FP),半按快 门键,闪光灯屏幕显示高速同步
 图标。此时闪光灯高速同步功能启动。
- 转动相机拨盘,快门速度能设置 为1/250s或更高的快门速度。
- 要确认目前是否正在使用FP高速 同步功能,通过相机取景器检查 快门速度即可判断。如果快门速 度为1/250s或更高,表示高速同 步功能启动。
- ▶ 如果在尼康相机机身设置中,将闪光同步速度设置为1/320 秒(自动FP)或1/250秒(自动FP),无论实际的快门速度是多少,闪光灯屏幕上的< 四 >图标都会显示。
 - 使用高速同步时,快门速度越高,有效的闪光范围就越小。
 - 要恢复普通闪光,请在尼康相机机身设置中,将闪光同步速度设置为非(自动FP)选项,半按快门时,闪光灯屏幕上的
 图 >图标会消失。
 - 在高速同步模式下,无法设置频闪闪光。
 - 连续高速同步闪光15次后,闪光灯热保护功能可能会被激活。

□▶ 第二帝快门同步

使用慢速快门,您可以在被摄体后创建一条光线轨迹。在快门关闭前的瞬间闪光灯闪光。

- 在尼康相机机身设置中,选择Rear闪光方式,即可实现后帘同步。
- 在尼康相机机身设置中,选择非Rear闪光方式,即取消后帘同步。

闪光模式: M 手动闪光

您可以在1/128功率至1/1全功率间以1/3档为增量设置闪光输出。 为获得正确的闪光曝光,请使用手持的闪光测光表确定所需的闪光输 出



按<MODE>模式选择按钮, 屏幕显示<M>。



全 转动调节旋钮设置闪光输出 功率。



3 按下<SET>设置按钮,确定 闪光输出功率。

显示闪光输出

拍摄过程中更改闪光输出时,下表将清楚地显示光圈值是如何更改的,如1/2-0.3→1/2+0.3。您可以在增加或减少闪光输出时查看光圈值的更改规律。

例如,将闪光输出量减少至1/2、1/2-0.3或1/2-0.7,然后再将其增加至大于1/2、1/2+0.3、1/2+0.7时,将显示1/1。

减少闪光输出指数→

1 /1	1/1-0.3	1/1-0.7	1/2	1/2-0.3	1/2-0.7	1/4	
171	1/2+0.7	1/2+0.3	1/2	1/4+0.7	1/4+0.3	1/4	

←増加闪光輸出指数

S1光控单元设置

在M手动闪光模式下,按<S1/S2>可以使用S1功能,闪光灯可作为 副灯使用,创造多种照明效果,适用于手动闪光环境。它会与主闪光 灯的第一次闪光同步触发闪光,效果与使用无线引闪器一致。

S2光控单元设置

在M手动闪光模式下,按<S1/S2>可以使用S2功能,闪光灯可作为 副灯使用,适用于TTL闪光环境。具有防预闪功能,使用带一次预闪 功能的相机能用光控实现同步拍摄。它会与主闪光灯的第二次闪光同 步触发闪光,即2次光控引闪。

手动离机高速设置

在M手动闪光模式下,按 SYNC 选择高速模式,显示 : 。此时引闪,会进行高速闪光。


■ 只有在M模式下才支持\$1/\$2光控引闪模式。

- 11 -

闪光模式: RPT 频闪闪光

使用频闪闪光,可以发出一系列快速的闪光。它可以在一张照片上拍 摄移动物体的多个图像。


您可以设置闪光频率(每秒的闪光次数,以Hz表示)、闪光次数和闪光输出。

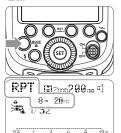

1 按<MODE>闪光模式选择按钮,屏幕显示<RPT>。
2 转动调节旋钮设置闪光输出功率。

2 设置闪光频率和闪光次数。

- ◆ 按功能按钮3 < MULTI > 选 择闪光次数,旋转调节旋 钮设定数字。
- 按<u>功能按钮4</u>< **Hz** >选 择闪光频率,旋转调节旋 钮设定数字。
- 按下<SET>设置按钮确 定,所有设置都将显示出 来

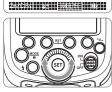

计算快门速度

在频闪闪光过程中,到闪光停止为止快门应保持开启状态。使用下面 的公式计算快门速度,然后用相机进行设置。

闪光次数/闪光频率 = 快门速度

例如,如果闪光次数是10,闪光频率是5Hz,快门速度则至少为2秒。

- ▲ 为防止闪光灯头过热并损坏,请勿执行连续10次以上的频闪 闪光连拍。闪光10次后,请让闪光灯至少冷却15分钟。如果 您试图执行连续10次以上的频闪闪光连拍,为防止闪光灯头 过热,闪光可能自动停止。如果发生了这种情况,请让闪光 灯至少冷却15分钟。
- 反光很强的被摄体在暗背景前使用频闪闪光更加有效。
 - 推荐使用三脚架和遥控开关。
 - 闪光输出为1/1和1/2时不能设置频闪闪光。
 - 频闪闪光时也可以使用 "buLb"。
 - 如果闪光次数显示为--,则闪光灯会连续闪光,直到快门或 电池耗尽。如下表所示,闪光次数将受到限制。

最大频闪闪光次数

闪 光输出	1	2	3	4	5	6-7	8-9
1/4	7	6	5	4	4	3	3
1/8	14	14	12	10	8	6	5
1/16	30	30	30	20	20	20	10
1/32	60	60	60	50	50	40	30
1/64	90	90	90	80	80	70	60
1/128	90	90	90	90	90	90	80


闪 光输出	10	20-50	60-100
1/4	2	2	2
1/8	4	4	4
1/16	8	8	8
1/32	20	16	12
1/64	50	30	20
1/128	70	40	40

无线闪光拍摄:光学传输

该产品支持尼康创意闪光系统(CLS),具备无线闪光功能,具有主控 闪光和从属闪光功能。作为主控单元,可以控制并引闪SB-900、SB-910等尼康闪光灯。作为从属单元,受控SB-900、SB-910闪光灯无 线信号和D7100/D7000/D800等相机内闪指令,从而实现无线闪光。

- 通过此款产品,支持创建三个从属单元组,并实现i-TTL自动闪 光。您可以通过i-TTL自动闪光轻松获取多种照明效果。
- 使用主控单元按组分别设置的任何i-TTL自动闪光,手动闪光和频闪闪光设置都会被自动传输到从属单元。因此,在拍摄时无需操作从属单元。只需在主控单元上对每个从属组进行单独设置就可完成。
- 将此产品设置为主控单元时,可以在i-TTL/M/RPT/OFF四种闪光模式下工作。

主控单元/从属单元设置位置和范围

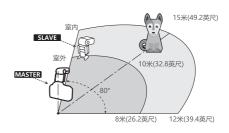


- 即使有多个从属单元,主控单元也可通过无线控制所有的闪光灯。
 - 本说明手册中, "主控单元"指安装在相机上的闪光灯, "从属单元"指通过无线控制的闪光灯。

1、无线设置


您可以在普通闪光和无线闪光之间切换。对于普通闪光,请务必将无 线设置设为"关"。

- 13 -

主控单元设置

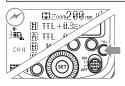

从属单元设置

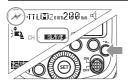

2、设置主控闪光灯的闪光模式

在禁用主控单元闪光模式下,只有从属单元的闪光灯闪光。




按功能按钮4< Gr >选择
M/A/B/C组别,再按功能按
组3< MODE >,选择主控
单元的闪光模式可以在
OFF/i-TTL/M之间进行切
换,选择其中一种作为主控
单元的闪光模式。

2 按 "MODE/锁定"按钮可切换至RPT模式。

3、设置通讯频道

CH 4 🗐

如果在拍摄现场不止一个无线闪光系统,您可以通过更改通讯频道来 防止信号干扰。保证主控单元和从属单元设置为相同的频道编号即 可。

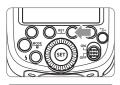

按下功能按钮3< CH >, 旋转调节旋钮从1至4中选择频道。

)按下<SET>设置按钮确定。



4、i-TTL: 全自动无线闪光拍摄

使用一个从属单元闪光



© M 1/128

₩i-ITL ©Dzoon299nn ଏ



[5/15/09[6:100]

┛ 设置主控单元。


- ◆ 将安装在相机上的V860IIN 设为主控单元。(第15页)
- M/A/B/C都可独立设置为 TTL。

→ 设置从属单元。

- ◆ 将要被无线控制的V860IIN 设为从属单元。(第15页)
- 可以选择A/B/C。

检查传输频道。

- 将主控单元和从属单元的 频道设为一致。(第15页)
- 全位相机和闪光灯。◆将其定位在(第14页)所示的范围内。

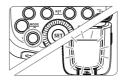

检查闪光灯是否准备就绪。

- ◆ 检查主控闪光灯就绪指示 灯点亮。
- 当从属闪光灯就绪时,自 动对焦辅助光发光区域以 1秒间隔闪烁。



检查操作。

- 按下主控闪光灯的试闪按钮< ★ >。
- 从属单元闪光。如果从属单元不闪光,检查是否将 其放置在操作范围内。
- ▲ 如果从属单元附近有荧光灯或电脑显示器,这些光源的存在可能会导致从属单元发生故障,并导致其意外闪光。
- 如果从属单元的自动关闭电源生效,按主控单元的测试闪光 按钮打开从属单元。请注意在相机的测光定时工作期间,无 法进行测试闪光。
 - 可以改变到从属单元的自动关闭电源生效为止的时间(C.Fn-Sv APOT/第26页)。
 - 可以进行设置以使自动对焦辅助发射器在从属单元回电完毕 时不闪烁(C.Fn-AF/第26页)。

使用全自动无线闪光

在主控单元上设定的闪光曝光补偿和其他设置也会在从属单元中自动设定。不需要操作从属单元。可按照与普通闪光拍摄相同的方法使用以下设置进行无线闪光拍摄。

○ 闪光曝光补偿(★ /第10页)


● 高速同步(SYNC /第11页)

关于主控单元

可以使用两个或两个以上主控单元。通过准备多台装有主控单元的相机,可以在保持相同照明(从属单元)期间更换相机进行拍摄。


5、M: 手动无线闪光拍摄

使用手动闪光的无线(多重闪光)拍摄,可以为每个从属单元(闪光组)设定不同的闪光输出进行拍摄。在主控单元上设定所有参数。

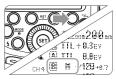

1 将闪光模式设为<M>。

按下功能按钮4< Gr > 选择组别,再按功能按钮3< MODE > 设定为M模式。

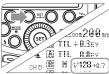

设置闪光输出

)拍摄照片

● 各组以设定的闪光光比闪 光。

6、RPT: 手动无线闪光拍摄



设定<RPT>**频闪模式。** 按下<MODE>模式选择 按钮令屏幕显示 <**ル** RPT>

设定频闪闪光设置。(第 13页)

▲ 可以在1Hz至100Hz之间设定光学无线传输拍摄期间的频闪闪光的闪光频率。


无线闪光拍摄:无线电(2.4G)传输

- 无线电创意系统,支持创建三个从属单元组,并实现TTL自动闪光。您可以通过TTL自动闪光轻松获取多种照明效果。
- 使用主控单元按组分别设置的任何TTL自动闪光, 手动闪光和频闪 闪光设置都会被自动传输到从属单元。因此, 在拍摄时无需操作从 属单元。只需在主控单元上对每个从属组进行单独设置就可完成。
- 将此产品设置为主控单元时,可以在i-TTL/M/Multi/OFF四种闪光模式下工作。
- ▶ 即使有多个从属单元,主控单元也可通过无线控制控制所有的闪光灯。
 - 本说明手册中,"主控单元"指安装在相机上的闪光灯, "从属单元"指通过无线控制的闪光灯。

1、无线设置

您可以在普通闪光和无线闪光之间切换。对于普通闪光,请务必将无线设置设为"关"。


主控单元设置

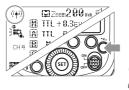

▼ >无线设置按钮, 令屏幕显示 < (♠) > , 如显示 < (♠) RPT > , 表示频闪模 式。

) 此时背光显示绿色。

从属单元设置

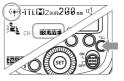


按下< → 无线设置按钮, 令屏幕显示<(♠)>和

< SLAVE >

此时背光显示橙色。

2、设置主控闪光灯的闪光模式

在禁用主控单元闪光模式下,只有从属单元的闪光灯闪光。

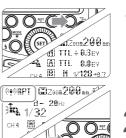


- 按功能按钮4 < Gr >选择 M/A/B/C组别,再按功能按 钮3 < MODE >选择主控单 元的闪光模式可以在 OFF / i-TTL / M 之间进行切换, 选择其中一种作为主控单元 的闪光模式
- 2 按 "MODE/锁定"按钮可 切换至RPT模式。

- 17 -

3、设置通讯频道

如果在拍摄现场不止—个无线闪光系统, 您可以通过更改通讯频道来 防止信号干扰。保证主控单元和从属单元设置为相同的频道编号即可。

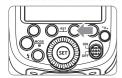

按下功能按钮3< CH >, 旋转调节旋钮从1至32中选 择频道。

按下<SET>设置按钮确定。

4、无线ID设置

为了避免信号干扰,除了改变无线通讯频道还可以通过改变无线ID来 防止干扰;主控单元和从控单元设为相同的频道和无线ID即可。进入 C.Fn ID,选择01-99其中任意一数无线ID打开,选OFF无线ID关闭。

5、i-TTL: 全自动无线闪光拍摄

使用一个从属单元闪光



(C) M 1/128

(#) 1-TTL (***)2000/2000 4 HOL CHA ISSESSED (A)

276023

- 将安装在相机上的V860IIN 设为主控单元。(第18页)
- M/A/B/C都可独立设置为 TTL.

设置从属单元。

设置主控单元。

- 将要被无线控制的V860IIN 设为从属单元。(第18页)
- 可以选择A/B/C。
- 检查传输频道。
 - 将主控单元和从属单元的 频道设为一致。(第19页)
- 定位相机和闪光灯。
 - 将其定位在(第14页)所示 的范围内。



- 检查主控闪光灯就绪指示 灯点亮。
 - 当从属闪光灯就绪时, 自 动对焦辅助光发光区域以 1秒间隔闪烁。





- 按下主控闪光灯的试闪按 钮< 4 >。
- 从属单元闪光。如果从属 单元不闪光, 检查是否将 其放置在操作范围内。

- ▲ 如果从属单元附近有荧光灯或电脑显示器,这些光源的存在 可能会导致从属单元发生故障,并导致其意外闪光。
- 如果从属单元的自动关闭电源生效,按主控单元的测试闪光 按钮打开从属单元。请注意在相机的测光定时工作期间,无 法进行测试闪光。
 - 可以改变到从属单元的自动关闭电源生效为止的时间(C.Fn-Sv APOT/第26页)。
 - 可以进行设置以使自动对焦辅助发射器在从属单元回电完毕 时不闪烁(C.Fn-AF/第26页)。

使用全自动无线闪光

在主控单元上设定的闪光曝光补偿和其他设置也会在从属单元中自动 设定。不需要操作从属单元。可按照与普通闪光拍摄相同的方法使用 以下设置进行无线闪光拍摄。


● 闪光曝光补偿(★± /第10页)


关于丰控单元

可以使用两个或两个以上主控单元。通过准备多台装有主控单元的相 机,可以在保持相同照明(从属单元)期间更换相机进行拍摄。

6、M: 手动无线闪光拍摄

使用手动闪光的无线(多重闪光)拍摄,可以为每个从属单元(闪光组)设 定不同的闪光输出进行拍摄。在主控单元上设定所有参数。

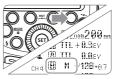

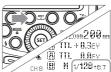

将闪光模式设为<M>。

按下功能按钮4< Gr > 选择组别,再按功能按钮 3< MODE >设定为M模

设置闪光输出

• 在选择组别状态下, 按功 能按钮2< 4 >选择功 率设定,旋转调节旋钮为 闪光组设定闪光输出,并 按<SET>设置按钮确定。


拍摄昭片

• 各组以设定的闪光光比闪 光。



- 19 -- 20 -

7、RPT: 手动无线闪光拍摄

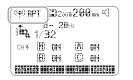

1 设定<RPT>频闪模式。 按下<MODE>模式选择 按钮令屏幕显示 <(%)RPT>

> 设定频闪闪光设置。(第 13页)

使具有无线电传输无线拍摄功能的闪光灯(主控/从属),可按照与普通 TTL自动闪光拍摄同样的方法,轻松利用高级无线多重闪光照明进行 拍摄。

基本相对位置和操作范围如图所示,只要将主控单元设定为<TTL> 就可以进行无线自动闪光拍摄。

定位和操作范围(无线闪光拍摄的示例)

• 使用一个从属单元进行自动闪光拍摄(第15页)



- 使用附带的微型支架定位从属单元。
 - 开始拍摄前请进行测试闪光和试拍。
 - 受从属单元的位置、周围环境、天气状况等影响,传输距离可能更短。


无线多重闪光拍摄

可以将从属单元分割为两个或三个组同时进行i-TTL自动闪光拍摄。 此外,可以为各闪光组(最多5个组)设定并用不同的闪光模式拍摄。

• 用两个从属组进行自动闪光拍摄。



• 用三个从属组进行自动闪光拍摄。

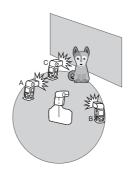

无线电传输比光学传输的拍摄具有优势, 距离更远, 耗电更少, 受障碍物的影响更小。无线电传输和光学传输的差异:

功能	无线电传输	光学传输
传输距离	100m	15m
频道	1~32	1~4
受干扰程度	难	易

▲ 神牛2.4G无线漏闪原因及解决办法

- 1. 外部环境2.4G信号干扰(如无线基站、2.4Gwifi路由、蓝牙设备等)
 - → 请调节引闪器的频道CH设置(建议+10),找到无干扰的频道来工作,或者在工作时关闭其他2.4G设备。
- 请确认闪光灯是否已经回电或者回电速度已经跟上连拍速度(闪光灯就 绪指示灯已经亮起),并且没有处于过热保护或者其他异常状态中
 - → 请下调闪光灯的档位,如是TTL模式可以尝试改为M模式(TTL模式下需要预闪一次)。
- 3. 是否引闪器和闪光灯距离太近(距离<0.5m)
 - → 请在引闪器上打开"近距离无线模式":

X1系列:按住引闪按钮不放,然后开机,直至指示灯闪2次。

Xpro系列:设置C.Fn-DIST为0-30m。

- 4. 是否引闪器和接收端设备在低电状态
 - → 请更换电池(引闪器电池建议使用1.5V一次性碱性电池)。

- 21 -

其他应用

外置无线控制功能

闪光灯内置无线控制插座,配合特定遥控器使用,您可以实现对闪光灯的无线控制。将FT系列遥控器的接收端插入无线控制插座,手持遥控器发射端,即可远程控制闪光灯的功率开关和大小、闪光灯触发等。您也可以将发射端置于相机热靴上,通过相机快门来进行同步引闪。



■ ● 更多遥控器的使用方法,请查阅FT系列遥控器的说明书。

同步插孔触发

同步插孔规格为Φ2.5mm,此处可插入同步线或者触发器触发插头对 闪光灯进行同步引闪。

造型闪光

如果相机有景深预视按钮,按下该按钮将会进行1秒钟的连续闪光, 这种现象称之为造型闪光。您可以通过造型闪光查看被摄体上的光影 效果及照明平衡,不管是无线拍摄还是普通闪光拍摄,都可以进行造 型闪光。

▲ • 请勿连续触发10次以上造型闪光。如果连续进行10次造型 闪光,请让闪光灯至少冷却10分钟,以防止闪光灯头过热或 损坏。

自动辅助对焦灯

在低亮度或低对比度的拍摄情况下,闪光灯内置的自动对焦辅助灯将 开启,使自动对焦更容易。当对焦困难时,红色辅助对焦灯亮起;当 对焦准确,辅助对焦灯自动熄灭。

如想关闭自动辅助对焦功能,在C.Fn设置 "AF" 至 "OFF"。

▶ ● 用户在使用时,如发现辅助对焦灯未亮起,是因为相机已经 处于准确对焦状态。

位置	有效范围
中央	0.6~10米 / 2.0~32.8英尺
边缘	0.6~5米 / 2.0~16.4英尺

反射闪光

通过将闪光灯头指向墙壁或天花板,闪光在照亮被摄体前被墙面反射。这可以减轻被摄物体背后的阴影,获得更自然的摄影效果。称之为反射闪光。




- ▶ 如果墙壁或天花板太远,反射闪光可能太弱并导致曝光不足。
 - 墙壁或天花板应该是平坦的、白色的以利于高效的反射。如果反射表面不是白色的,照片将出现偏色。

- 23 -

创建眼神光

使用眼神光板, 您可以在被摄体的眼睛中创建眼神光以使面部表情更加生动。

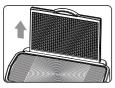

▼ 将闪光灯头向上旋转90°。

2 拉出广角散光板,同时弹出 眼神光板。




推入广角散光板。

- 仅推入广角散光板。
- 按照反射闪光中相同的步骤进行。
- ▲ 请将闪光灯头向前指然后向上旋转90度。如果左右旋转闪光灯头就不会产生眼神光。
 - 要获得最好的眼神光效果,被摄体不能处于相机1.5米/4.9英尺以内。


ZOOM:设置闪光覆盖范围并使用广角散光板

该闪光灯有两种变焦方式:自动变焦和手动变焦。可以设置闪光覆盖范围以匹配20-200毫米的镜头焦距。自动变焦时,焦距会随相机变焦镜头的改变而变化,以提供最佳闪光效果。同样,使用内置的广角散光板,闪光覆盖范围可以扩展为14毫米广角镜头。

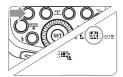

手动变焦时,按下<ZOOM/C.FN> 变焦/无线设置按钮。

- 转动调节旋钮更改闪光覆盖范围。
- 在显示< ▲ >状态下,将自动 设置闪光覆盖范围。
- ● 如果手动设置闪光覆盖范围,确保其覆盖镜头焦距,这样照片就不会出现阴影边缘。

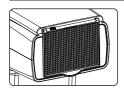

使用广角散光板

拉出广角散光板并将其置于闪光灯 头上。闪光覆盖范围将扩展至14毫 米。

- 同时弹出眼神光板。请推回眼神 光板。
- <ZOOM/C.FN>按钮不起作用

(*) ©200m200mm (10)

1 TTL+0.3ev

1 A TTL -0.8ev

CH8 B M 1/128-0.7

CH8 B M 1/128-0.7

C.Fn:设置自定义功能

请对照以下图表本机应用栏,使用自定义功能来完成设置。

自定义	功能	设置符号	设置和说明
功能符号			
m/ft	距离指示显示	m	*
		ft	英尺
APO	自动关闭电源	ON	启动
		OFF	关闭
AF	自动对焦辅助光闪光	ON	启动
		OFF	关闭
Sv APOT	从属单元自动关闭	60min	60分钟
	电源计时器	30min	30分钟
BEEP	蜂鸣器	ON	启动
		OFF	关闭
		12sec	12秒后自动熄灭
LIGHT	背光点亮时间	OFF	一直熄灭
		ON	一直点亮
LCD	液晶屏对比度	0~9	10个级别
ID	无线ID	OFF	关闭
		01-99	选择01-99任意
			一个数字打开
Sv LED	无线LED提示灯	OFF	关闭
		ON	打开

- 1. 长按 < **Zm/C.Fn** >背光/自定义按钮2秒或更长,直到显示C.Fn菜单。右上角"Ver x.x"表示软件版本号。
- 2. 冼择自定义功能符号。
 - 旋转调节旋钮设置自定义功能。
- 3. 更改设置。
 - 按 < SET > 设置按钮, 自定义功能编号闪烁。
 - 旋转调节旋钮设置想要的编号,按 < SET > 按钮确定。
 - 设置自定义功能后按下 < MODE > 模式选择按钮,相机可以进行拍摄。
- 4. 在C.Fn状态下,长按"Clear"按钮2秒直至出现"OK",表示重置C.Fn的参数。

- 25 -

保护功能

1. 热保护

- 为防止闪光灯头过热并损坏,请勿在1/1功率时进行超过30次的快速连续闪光。30次连续闪光后,要让闪光灯至少冷却10分钟。
- 如您在进行超过30次连续闪光后马上继续进行更多次闪光,内部的防过热功能可能会被激活,使充电时间变为10秒以上。如果发生这种现象,请让闪光灯冷却约10分钟,闪光灯便会恢复正常。
- 热保护启动后,显示屏上 灣 的符号会显示。

激活热保护功能的连续闪光次数:

功率	次数
1/1	30
1/2 +0.7	40
1/2 +0.3	50
1/2	60
1/4(+0.3,+0.7)	100
1/8(+0.3,+0.7)	200
1/16(+0.3,+0.7)	300
1/32(+0.3,+0.7)	500
1/64(+0.3,+0.7)	1000
1/128(+0.3,+0.7)	

高速同步模式下,激活热保护功能的连续闪光次数:

功率	次数
1/1	15
1/2(+0.3,+0.7);	20
1/4(+0.3,+0.7)	30
1/8(+0.3,+0.7);	
1/16(+0.3,+0.7)	40
1/32(+0.3,+0.7);	
1/64(+0.3,+0.7);	50
1/128(+0.3,+0.7);	

2. 其他保护

 为了保证设备安全的工作,系统时刻进行预防保护,以下提示符号 供您参考:

LCD显示	警示内容		
E1	闪光灯回电系统出现问题,无法回电引闪,请重新开机,如无法 解决请维修		
E2	设备内温度过高,请停止引闪10分钟		
E3	闪光灯管两端电压过高,请维修		
E9	固件升级有误,请进行正确固件升级		

规格参数

型号		V860IIN		
类型				
兼容相机		Nikon尼康数码单镜反光照相机(i-TTL自动闪光)		
闪光指数		60(m ISO 100)		
(1/1档位; 200	mm焦距)	190(feet ISO 100)		
闪光覆盖范围		20-200毫米		
		•自动变焦(自动设置适合镜头焦距和图像尺寸的闪		
		光覆盖范围)		
		•手动变焦		
		•闪光灯头旋转/倾斜,水平0~360°,		
		垂直-7°~90°(反射闪光)		
闪光持续时间		1/300秒 - 1/20000秒		
・曝光控制				
曝光控制系统		i-TTL 自动闪光、手动闪光		
闪光曝光补偿(F	EC)	手动,闪光包围曝光:在±3档间以1/3档为增量调节		
		(可以组合使用手动闪光曝光补偿和闪光包围曝光)		
同步方式		高速同步(最高1/8000秒),前帘同步,后帘同步		
频闪闪光		具备(次数: 90次; 100Hz)		
・无线闪光(光学	传输和无约	线电2.4G传输)		
无线功能		主控单元, 从属单元, 关闭		
可控制从属单元	組	3组: A, B, C		
传输范围(约)	光学	室内: 12~15米/39.4~49.2英尺		
		室外: 8~10米/26.2~32.8英尺		
		接收角度: 水平±40°, 垂直±30°		
	2.4G	100m		
频道	光学	4组: 1, 2, 3, 4		
	2.4G	32组: 1~32		
从属单元状态指	示灯	两红灯同时亮起		
造型闪光		使用相机的景深预视按钮进行闪光		
自动対焦辅助	光			
有效范围(约)		中央: 0.6 -10米 / 边缘: 0.6-5米		
・电源				
内装锂电		11.1V/2000mAh 锂聚合物电池		
回电时间		< 1.5秒,闪光灯准备就绪,LED红色指示灯亮起		
全功率闪光次数	[约650次		
节能		闪光灯在无人操作90秒左右将会自动关闭电源。		
		设置为从属单元时60分钟进入休眠状态。		
・同步触发方式		热靴, 2.5mm同步线, 无线控制插座		
・色温		5600±200k		
・尺寸				
体积		64 *76*190 mm		
净重(不含电池)		430g		
		540g		

- 27 -

故障排除指南

如果遇到问题,请参阅此故障排除指南。

闪光灯不闪光。

- 闪光灯没有牢固地安装在相机上。
 - →将闪光灯的固定座牢固地安装在相机上。
- 闪光灯和相机的电子触点变脏。
 - →请清洁触点。

电源自动关闭。

- 当灯作为主控单元时,90秒无操作后,自动电源关闭功能生效。
 →半按快门按钮或机身任意按键唤醒。
- 作为从属单元在60分钟(或者选择30分钟)无任何操作时,闪光灯会进入休眠状态。
 - →可按机身任意按键唤醒。

自动变焦不工作。

- 闪光灯没有牢固地安装在相机上。
 - →将闪光灯的固定座牢固地安装在相机上。

闪光曝光不足或过度。

- 使用高速同步。
- →使用高速同步,有效的闪光范围会更小。确保被摄体位于显示 的有效闪光范围内。
- 闪光灯使用手动曝光模式。
 - →改为i-TTL模式或修改闪光输出功率设置。

相片出现暗角或者被摄物体只有局部能照亮。

- 相机镜头焦距超出闪光灯的覆盖范围。
 - 一请检查闪光灯当前的覆盖焦距。本产品的灯头变焦范围是中画幅系统的20-200mm,您可以尝试拉出广角闪光板,以扩大闪光范围。

固件升级

- 产品升级固件需要Godox G3程序软件支持,升级固件前请先下载 安装 "Godox G3固件升级软件"再选择相应的固件文件。
- 由于产品进行固件升级,说明书请以最新电子版为准。
- ★ 注:本品出厂不配USB升级线,请另行购买。普通的USB线可使用,本产品USB口为Micro USB 接口。

兼容相机列表

本机可兼容以下Nikon数码单镜反光照相机型号:

D800	D700	D7100	D7000	D5200	D5100	D5000
D300	D300S	D3200	D3100	D3000	D200	D70S
D810	D610	D90	D750			

6注:

- 1. 此表格仅列举目前已测试的相机型号,未涵盖所有Nikon数码单镜反光照相机。其他相机型号,用户可自行测试。
- 2. 本公司保留未来修改此表格内容的权利。

维护保养

- 闪光灯在工作时, 如发现异常, 应立即关掉电源, 查明原因。
- 灯体应避免震动,平时注意表面除尘。
- 灯体稍有发热为正常现象,无特别需要时,勿连续引闪。
- 闪光灯的所有维修概由本厂指定可供原厂配件之维修部负责。
- 1年保修, 消耗品如灯管等, 不在1年保修范围。
- 经发现,擅自检修此闪光灯的,将取消闪光灯之一年保修期,维修需要收取相关费用。
- 如果本品出现故障或者被水淋湿,在专业人员维修后方可继续使用。
- 如有技术更改, 恕不另行通知。

- 29 -

Foreword

Thank you for purchasing this product.

This V860IIN camera flash applies to Nikon DSLR series cameras and is compatible with i-TTL autoflash. With this i-TTL compatible flash, your shooting will become simpler. You can easily achieve a correct flash exposure even in complex light-changing environments. This camera flash features:

- GN60 (m ISO 100, @200mm). 22 steps from 1/1 to 1/128.
- Pro 2000mAh Li-ion Battery-max.1.5s recycle-650 full power pops.
- Fully support Nikon i-TTL camera flash. Workable as Master or Slave unit in a wireless flash group.
- Use dot-matrix LCD panel to make clear and convenient operations.
- With built-in 2.4GHz wireless remote system to support transmitting and receiving.
- Provided multiple functions, include HSS (up to 1/8000s), FEC, etc.
- Use optional FT-16S to adjust flash parameters & trigger the flash.
- Stable consistency and color temperature with good even lighting.
- Support with firmware upgrade.

Warning

- Always keep this product dry. Do not use in rain or in damp conditions.
- ▲ Do not disassemble. Should repairs become necessary, this product must be sent to an authorized maintenance center.
- A Keep out of reach of children.
- Stop using this product if it breaks open due to extrusion, falling or strong hit. Otherwise, electric shock may occur if you touch the electronic parts inside it.
- Do not fire the flash directly into the eyes (especially those of babies) within short distances. Otherwise visual impairment may occur.
- Do not use the flash unit in the presence of flammable gases, chemicals and other similar materials. In certain circumstance, these materials may be sensitive to the strong light emitting from this flash unit and fire or electromagnetic interference may result
- Do not leave or store the flash unit if the ambient temperature reads over 50°C. Otherwise the electronic parts may be damaged.
- ▲ Turn off the flash unit immediately in the event of malfunction.

- 31 -

Contents

31	Fore	eword

32 Warning

35 Name of Parts

Body

Control Panel

Dot-matrix LCD Panel

What's in the Box of V860IIN Kit?

What's in the Box of V860IIN (only flash unit)?

Separately Sold Accessories

38 Battery

39 Attaching to a Camera

39 Power Management

40 Flash Mode — i-TTL Autoflash

FEC (Flash Exposure Compensation)

High-Speed Sync

Second-Curtain Sync

42 Flash Mode — M: Manual Flash

43 Flash Mode — RPT: Stroboscopic Flash

44 Wireless Flash Shooting: Optic Transmission

Wireless Settings

Setting Master Unit's Flash Mode

Setting the Communication Channel

i-TTL: Fully Automatic Wireless Flash Shooting

M: Wireless Flash Shooting with Manual Flash

RPT: Wireless Flash Shooting with Manual Flash

48 Wireless Flash Shooting: Radio (2.4G) Transmission

Wireless Settings

Setting Master Unit's Flash Mode

Setting the Communication Channel

Wireless ID Settings

i-TTL: Fully Automatic Wireless Flash Shooting

M: Wireless Flash Shooting with Manual Flash

RPT: Wireless Flash Shooting with Manual Flash

52 Other Applications

Wireless Control Function

Sync Triggering

Modeling Flash

Auto Focus Assist Beam

Bounce Flash

Creating a Catchlight

ZOOM: Setting the Flash Coverage and Using the Wide Panel

Low Battery Warning

55 C.Fn: Setting Custom Functions

56 Protection Function

57 Technical Data

58 Troubleshooting 59 Firmware Upgrad

59 Firmware Upgrade59 Compatible Camera Models

59 Maintenance


Pioneering Li-ion Camera Flash

Conventions used in this Manual

- This manual is based on the assumption that both the camera and camera flash's power switches are powered on.
- Reference page numbers are indicated by "p.**".
- The following alert symbols are used in this manual:
 The Caution symbol indicates a warning to prevent shooting
- problem.
- The Note symbol gives supplemental information.


- 33 -

Name of Parts

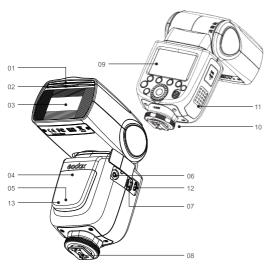

Body

- 01. Catchlight Panel
- 02. Built-in Wide Panel
- 03. Flash Head
- 04. Optic Control Sensor
- 05. Focus Assist Beam
- 06. Sync Cord Jack
- 07. Wireless Control Port
- 08. Hotshoe
- 09. Dot-marix LCD Panel
- 10. Lock Ring
- 11. Battery Compartment
- 12. USB Port
- 13. Slave Flash Ready Indicator

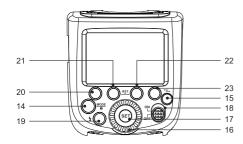


Control Panel

- 14. <MODE> Mode Selection
 Button / Lock button
- 15. < ⁴Z▶ >Wireless Selection
 Button
- 16. Select Dial
- 17. <SET> Set Button
- 18. ON/OFF Power Switch
- 19. < 👣 > Test Button / Flash Ready Indicator
- 20. Function Button 1
- 21. Function Button 2
- 22. Function Button 3
- 23. Function Button 4

LCD Panel

(1)i-TTL Autoflash

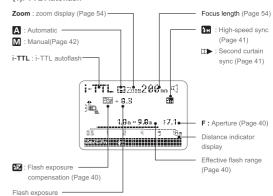

compensation amount


- The display will only show the settings currently applied.

 - When a button or dial is operated, the LCD panel illuminated.

(2)M Manual Flash




(3)Multi Flash

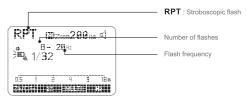

- 35 -

(4) Radio Transmission Shooting/Optic Transmission Shooting

Master Unit

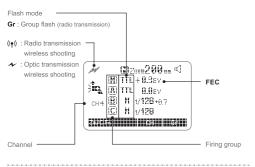

Slave Unit



• What's in the Box of V860IIN Kit?

- 1. Flash Unit 2. Li-ion Battery Pack 3. Battery Charger
- 4. Battery Charger Cable 5. Mini Stand
- 6. Protection Case 7. Instruction Manual

• What's in the Box of V860IIN (only flash unit)?

- 1. Flash Unit 5. Mini Stand 6. Protection Case
- 7. Instruction Manual



Separately Sold Accessories

The product can be used in combination with the following accessories sold separately, so as to achieve best photography effects:

X1N TTL wireless flash trigger, FT-16S power & trigger control, Mini softbox, White & Silver reflector, Honeycomb, Color gels, Snoot, etc.



Battery

Features

- 1. This flash unit uses Li-ion polymer battery which has long runtime. The available charge-and-discharge times are 500.
- It is reliably safe. The inner circuit is against overcharge, overdischarge, overcurrent, and short circuit.
- Take only 2.5 hours to fully charge the battery by using the standard battery charger.

Cautions

- 1. Do not short circuit.
- 2. Do not expose to rain or immerse into water. This battery is not water proof.
- 3. Keep out of reach of children.
- 4. No over 24 hours' continuous charging.
- 5. Store in dry, cool, ventilated places.
- 6. Do not put aside or into fire.
- 7. Dead batteries should be disposed according to local regulations.
- 8. If the battery had ceased using for over 3 months, please make a full recharge.

Loading and Unloading the Battery




To load the battery, push the battery compartment cover downward and open it.



According to the triangle sign on the battery pack, insert it into the compartment until a white knob locks the battery with a click sound.

- 37 -

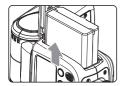


To unload the battery, tap the white knob and the battery pack will pop out. Then close the compartment.

Battery Level Indication

Make sure the battery pack is securely loaded in the flash. Check the battery level indication on the LCD panel to see the remaining battery level.


Battery Level Indication	Meaning
3 grids	Full
2 grids	Middle
1 grid	Low
Blank grid	Lower battery, please recharge it.
Blinking	The battery level is going to be used out immediately. And the flash will auto power off in 1 minute. Note: Please recharge the battery as soon as possible (within 10 days). Then, the battery can be used or be placed for long period.

Attaching to a Camera

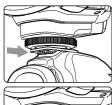


Attach the Camera Flash.

· Slip the camera flash's mounting foot into the camera's hotshoe all the way

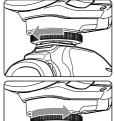

Secure the Camera Flash.

• Rotate the lock ring on the mounting foot until it locks up

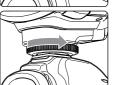

Detach the Camera Flash.

• Rotate the lock ring on the mounting foot until it is loosened

Power Management

Use ON/OFF Power Switch to power the flash unit on or off. Turn off if it will not be used for an extended period of time. Setting as a master flash, it will turn the power off automatically after a certain period (approx. 90 seconds) of idle use. Pressing the camera shutter halfway or pressing any flash button will wake up the flash unit. Setting as a slave flash, it will enter sleep mode after a certain period (adjustable, 60 minutes by default) of idle use. Pressing any flash button will wake it up.

- C.Fn Disabling Auto Power Off function is recommended when the flash is used off camera. (C.Fn-APO, Page 55) C.Fn Slave Auto Power Off Timer is set to 60 minutes by
 - default. Another option "30 minutes" is available. (C.Fn-Sv APOT, Page 55)

Flash Mode — i-TTL Autoflash

This flash has three flash modes: i-TTL, Manual (M), and RPT (Stroboscopic). In i-TTL mode, the camera and the flash will work together to calculate the correct exposure for the subject and the background. In this mode, multiple TTL functions are available: FEC, HSS, second curtain sync, modeling flash, etc.

* Press < MODE > Mode Selection Button and three flash modes will display on the LCD panel one by one with each pressing.

i-TTL Mode


Press < MODE > Mode Selection Button to enter i-TTL mode. The LCD panel will display.


- Press the camera release button halfway to focus. The aperture and effective flash range will be displayed in the viewfinder.
- When the shutter button is fully pressed, the flash will fire a preflash that the camera will use to calculate exposure and flash output the instant before the photo is taken.

FEC: Flash Exposure Compensation

With FEC function, this flash can adjust from -3 to +3 in 1/3rd stops. It is useful in situations where minor adjusting of the TTL system is needed based on the environment.

Setting FEC:

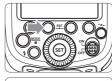

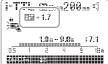



- Press Function Button 2 < 1± >. The icon < 12 > and flash exposure compensation amount will be highlighted on the LCD panel.
- Set the flash exposure compensation amount.
 - . Turn the Select Dial to set the amount.
 - "0.3" means 1/3 step. "0.7" means 2/3 step.
 - To cancel the flash exposure compensation, set the amount to "+0".
- Press < SET > button again to confirm the setting.

- 39 -- 40 -

High-Speed Sync

High Speed Sync (FP flash) enables the flash to synchronize with all camera shutter speeds. This is convenient when you want to use aperture priority for fill-flash portraits.

Select the high-speed sync icon < \$\forall H >.



- Turning the camera command dial can set the shutter speed to 1/250s or faster.
- To check if the FP flash function works properly, look through the shutter speed in the viewfinder.
 If it shows a speed of 1/250s or faster, the FP flash function is on work.
- If you set a shutter speed as 1/320s (Auto FP) or 1/250s (Auto FP) in the Nikon camera setting, < ™ > will be displayed in the flash screen regardless of practical shutter speed.
 - With high-speed sync, the faster the shutter speed, the shorter the effective flash range.
 - To return to normal flash, set the flash sync speed to other options other than Auto FP. Then the icon < > will disappear when pressing the shutter halfway.
 - Multi flash mode cannot be set in high-speed sync mode.
 - Over-temperature protection may be activated after 15 consecutive high-speed sync flashes.

Second-Curtain Sync

With a slow shutter speed, you can create a light train following the subject. The flash fires right before the shutter closes.


- Set the camera to Rear mode to achieve second curtain sync.
- Set the camera to Non Rear mode to cancel second curtain sync.

Flash Mode — M: Manual Flash


The flash output is adjustable from 1/1 full power to 1/128th power in 1/3rd stop increments. To obtain a correct flash exposure, use a hand-held flash meter to determine the required flash output.



Press < MODE > button so that < M > is displayed.

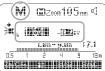

Turn the Select Dial to choose a desired flash output amount.

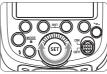

Press < **SET** > button again to confirm the setting.

Flash Output Range

The following table makes it easier to see how the stop changes in terms of f/stop when you increase or decrease the flash output. For example, when you decrease the flash output to 1/2, 1/2-0.3, or 1/2-0.7, and then increase the flash output to more than 1/2, 1/2+0.3, 1/2+0.7, and 1/1 will be displayed.

Figures displayed when reducing flash output level-

1/1	1/1-0.3	1/1-0.7	1/2	1/2-0.3	1/2-0.7	1/4	
17.1	1/2+0.7	1/2+0.3	1/2	1/4+0.7	1/4+0.3	1/4	

←Figures displayed when increasing flash output level

Optic S1 Secondary Unit Setting

In M manual flash mode, press <\$1/\$2> button so that this flash can function as an optic \$1 secondary flash with optic sensor. With this function, the flash will fire synchronously when the main flash fires, the same effect as that by the use of radio triggers. This helps create multiple lighting effects.

Optic S2 Secondary Unit Setting

Press <\$1/52> button so that this flash can also function as an optic S2 secondary flash with optic sensor in M manual flash mode. This is useful when cameras have pre-flash function. With this function, the flash will ignore a single "preflash" from the main flash and will only fire in response to the second, actual flash from the main unit.

Manual Off Camera High-speed Setting

In M manual flash mode, press < **SYNC** > button to select high-speed mode and **3H** is displayed.

• S1 and S2 optic triggering and off camera high-speed mode are only available in M manual flash mode.

- 41 -


Flash Mode — RPT: Stroboscopic Flash

With stroboscopic flash, a rapid series of flashes is fired. It can be used to capture a multiple images of a moving subject in a single photograph.

You can set the firing frequency (number of flashes per sec. expressed as Hz), the number of flashes, and the flash output.





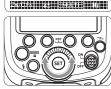

- Press < MODE > button so that < RPT > is displayed.
- 2 Turn the Select Dial to choose a desired flash output.
- 3 Set the flash frequency and flash times.
 - Press Function <u>Button 3</u>
 MULTI > button to select the item (blinks).

 - After you finish the setting, press <SET> button and all the settings will be displayed.

Calculating the Shutter Speed

During stroboscopic flash, the shutter remains open until the firing stops. Use the formula below to calculate the shutter speed and set it with the camera.

Number of Flashes / Flash Frequency = Shutter Speed

For example, if the number of flashes is 10 and the firing frequency is $5~\mathrm{Hz}$, the shutter speed should be at least 2 seconds.

▲ To avoid overheating and deteriorating the flash head, do not use stroboscopic flash more than 10 times in succession.

After 10 times, allow the camera flash to rest for at least 15 minutes. If you try to use the stroboscopic flash more than 10 times in succession, the firing might stop automatically to protect the flash head. If this happens, allow at least 15 minutes' rest for the camera flash.

- Stroboscopic flash is most effective with a highly reflective subject against a dark background.
 - . Using a tripod and a remote control is recommended.
 - A flash output of 1/1 and 1/2 cannot be set for stroboscopic flash
 - · Stroboscopic flash can be used with "buLb".
 - If the number of flashes is displayed as "--", the firing will continue until the shutter closes or the battery is exhausted. The number of flashes will be limited as shown by the following table.

Maximum Stroboscopic Flashes:

Flash Hz output	1	2	3	4	5	6-7	8-9
1/4	7	6	5	4	4	3	3
1/8	14	14	12	10	8	6	5
1/16	30	30	30	20	20	20	10
1/32	60	60	60	50	50	40	30
1/64	90	90	90	80	80	70	60
1/128	90	90	90	90	90	90	80


Flash Hz output	10	20-50	60-100
1/4	2	2	2
1/8	4	4	4
1/16	8	8	8
1/32	20	16	12
1/64	50	30	20
1/128	70	40	40

Wireless Flash Shooting: Optic Transmission

This product is compatible with Nikon Creative Lighting System (CLS). It can function as either an optic wireless master or slave flash. As a master unit, it can control Nikon speedlights e.g. SB-900 and SB-910 via wireless. As a slave unit, it can be controlled by wireless signals of Nikon speedlights e.g. SB-900 and pop-up flash commanders of Nikon cameras e.g. D7100/D7000/D800.

- You can set up three slave groups for i-TTL autoflash shooting.
 With i-TTL autoflash, you can easily create various lighting effects.
- Any flash settings for the slave units on the master flash in i-TTL / Manual / RPT mode will be automatically sent to the slave units.
 So the only thing you need to do is to set the master unit for each slave group without any operation for the slave units at all during the shooting.
- This flash can work in i-TTL / M / RPT / OFF flash modes when set as a master unit

Slave/Master Unit's Positioning and Operation Range

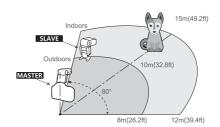


- 43 -

- Even with multiple slave units, the master unit can control all of them via wireless.
 - In this user manual, "master unit" refers to the camera flash on a camera and "slave unit" will be controlled by the master unit.

1. Wireless Settings

You can switch between normal flash and wireless flash. For normal flash shooting, be sure to set the wireless setting to OFF.


Master Unit Setting

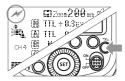

Press < → > button so that < 사 > is displayed on the LCD panel. If < * RPT> is displayed, it means RPT mode is ON.

The backlight turns green now.


Slave Unit Setting

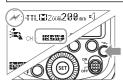

Press < >> button again so that < >> and < SLAVE > are displayed on the LCD panel. The backlight turns orange now.

2. Setting Master Unit's Flash Mode



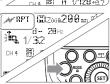

- Press Function Button 4 er > to choose the group from M/A/B/C. Then, press Function Button 3 < MODE > so that the
- master unit can work in OFF / i-TTL / M flash mode Choose one of them as the flash mode of master unit.
- Press the "MODE/Lock "button can change to RPT mode

3. Setting the Communication Channel

If there are other wireless flash systems nearby, you can change the channel IDs to prevent signal interference. The channel IDs of the master unit and the slave unit(s) must be set to the same.



Press Function Button 3 < CH > and turn the Select Dial to choose a channel ID from 1 to 4.

Press the <SET> button to confirm.

4. i-TTL: Fully Automatic Wireless Flash Shooting

Using Automatic Wireless Flash with a Single Slave Unit





Master Unit Setting

- Attach a V860IIN camera flash on the camera and set it as the master Unit. (Page 45)
- M/A/B/C can be set as TTL mode independently.

Slave Unit Setting


- Set the other camera flash as the wireless slave Unit. (Page 45)
- The slave unit can be set as A/B/C.

Check the communication

. If the master unit and slave unit(s) are set to a different channel, set them to the same channel. (Page 45)

Position the camera and flashes.

 Position the camera and flashes as the picture shows. (Page 44)

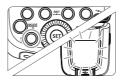

Check that the flash is ready.

- · Check that the master flash ready indicator is lightened.
- · When the slave flash ready indicator is ready, the AFassist beam lighting area will blinks at 1 second intervals.



Check the flash operation.

- · Press the master unit's Test Button < 4 >.
 - Then, the slave unit will fire. If not, adjust the slave unit's angle toward the master unit and distance from the master unit.
- ▲ The slave unit might be out of order or fire an unwanted flash due to the nearby fluorescent lamp or computer screen.
- If the slave unit's auto power off function is workable, press the master unit's test button to power it on. Please note that test firing is unavailable during the camera's regular metering time.
 - The effective time of slave auto power off is changeable. (C.Fn-Sv APOT Page 55)
 - . By making some settings, the auto AF-assist transmitter will not blink after the slave unit's flash ready indicator is lightened. (C.Fn-AF Page 55)

- 45 -- 46 -

Using Fully Automatic Wireless Flash

The FEC and other settings that set on the master unit will also be appeared on the slave unit automatically. The slave unit does not need any operation. Use the following settings to make wireless flashes according to the same methods with normal flash shooting.


- High-Speed Sync (SYNC Page 41)


About Master Unit

Use two or more master units. By preparing several cameras that with master units flash attached, cameras can be changed in shooting while keeping the same lighting source (slave unit).


5. M: Wireless Flash Shooting with Manual Flash

This describes wireless (multiple shooting) using manual flash. You can shoot with a different flash output setting for each slave unit (firing group). Set all parameters on the master unit.

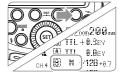

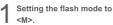

Press Function <u>Button 4</u>
 gr > to choose groups.
 Then, press Function
 <u>Button 3</u> < <u>MODE</u> > to set the flash to <u>M</u> mode.

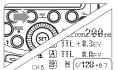

Setting flash output.

Press Function <u>Button 2</u>

 Time Select
Dial to set the flash output of the groups. Press the

 SET> button to confirm.

3 Taking the picture.

 Each group fires at the set flash ratio.

6. RPT: Wireless Flash Shooting with Manual Flash



Setting < RPT > stroboscopic flash.

- Press <MODE> button so that
 RPT > is displayed.
- Setting the stroboscopic flash. (Page 43)

The firing frequency of stroboscopic flash during the optic transmission wireless shooting can be set from 1Hz to 100Hz (settings from 250 Hz to 500 Hz are not available).


Wireless Flash Shooting: Radio (2.4G) Transmission

- You can set up three slave groups for TTL autoflash shooting.
 With TTL autoflash, you can easily create various lighting effects.
- Any flash settings for the slave units on the master flash in TTL mode will be automatically sent to the slave units. So the only thing you need to do is to set the master unit for each slave group without any operation for the slave units at all during the shooting.
- This flash can work in i-TTL /M /Multi / OFF flash modes when set as a master unit.
- Even with multiple slave units, the master unit can control all of them via wireless.
 - In this user manual, "master unit" refers to the camera flash on a camera and "slave unit" will be controlled by the master unit.

1. Wireless Settings

You can switch between normal flash and wireless flash. For normal flash shooting, be sure to set the wireless setting to OFF.


Master Unit Setting

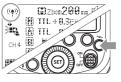

Press < → > button so that <(♠)> is displayed on the LCD panel. If <(♠) RPT> is displayed, it means RPT mode is ON.

2 The backlight turns green now.


Slave Unit Setting

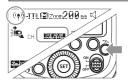

Press < $^{\bullet}$ > button again so that <(ϕ) > and < SLAVE > are displayed on the LCD panel.

The backlight turns orange

2. Setting Master Unit's Flash Mode

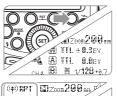

- Press Function Button 4

 Gr > to choose the group from M/A/B/C. Then, press Function Button 3
 - < MODE > so that the master unit can work in OFF / i-TTL / M flash mode. Choose one of them as the flash mode of master unit.
- Press the "MODE/Lock "button can change to RPT mode.

- 47 -

3. Setting the Communication Channel

If there are other wireless flash systems nearby, you can change the channel IDs to prevent signal interference. The channel IDs of the master unit and the slave unit(s) must be set to the same.



Press the **SET**> button to confirm.

4. Wireless ID Settings

Change the wireless channels and wireless ID to avoid interference for it can only be triggered after the wireless IDs and channels of the master unit and the slave unit are set to the same.

Press the <MENU> button to enter C.Fn ID. Press the <SET> button

to choose OFF channel expansion shutdown, and choose any figure from 01 to 99.

5. i-TTL: Fully Automatic Wireless Flash Shooting

Using Automatic Wireless Flash with a Single Slave Unit





Master Unit Setting

- Attach a V860IIN camera flash on the camera and set it as the master Unit. (Page 48)
- M/A/B/C can be set as TTL mode independently.

Slave Unit Setting

- Set the V860IIN that to be controlled as the wireless slave unit. (Page 48)
- The slave unit can be set as A/B/C.

3 Check the communication

 If the master unit and slave unit(s) are set to a different channel, set them to the same channel. (Page 49)

Position the camera and flashes.

 Position the camera and flashes as the picture shows. (Page 44)



5 Check that the flash is ready.

- Check that the master flash ready indicator is lightened.
- When the slave flash ready indicator is ready, the AFassist beam lighting area will blinks at 1 second intervals



Check the flash operation.

- Press the master unit's
 Test Button < 1 >.
- Then, the slave unit will fire. If not, adjust the slave unit's angle toward the master unit and distance from the master unit.
- ▲ The slave unit might be out of order or fire an unwanted flash due to the nearby fluorescent lamp or computer screen.
- If the slave unit's auto power off function is workable, press the master unit's test button to power it on. Please note that test firing is unavailable during the camera's regular metering time.
 - The effective time of slave auto power off is changeable. (C.Fn-Sv APOT Page 55)
 - By making some settings, the auto AF-assist transmitter will not blink after the slave unit's flash ready indicator is lightened. (C.Fn-AF Page 55)

Using Fully Automatic Wireless Flash

The FEC and other settings that set on the master unit will also be appeared on the slave unit automatically. The slave unit does not need any operation. Use the following settings to make wireless flashes according to the same methods with normal flash shooting.


• Flash Exposure Compensation (\$\frac{\pmathrm{

About Master Unit

Use two or more master units. By preparing several cameras that with master units flash attached, cameras can be changed in shooting while keeping the same lighting source (slave unit).


6. M: Wireless Flash Shooting with Manual Flash

This describes wireless (multiple shooting) using manual flash. You can shoot with a different flash output setting for each slave unit (firing group). Set all parameters on the master unit.

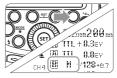

Setting the flash mode to <M>.

Press Function <u>Button 4</u>
 gr > to choose groups.
 Then, press Function
 <u>Button 3</u> < <u>MODE</u> > to set the flash to <u>M</u> mode.

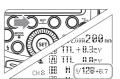

Setting flash output.

- Press Function <u>Button 2</u>
 - < 12 > Turn the Select Dial to set the flash output of the groups. Press the <SET> button to confirm.
- Taking the picture.
 - Each group fires at the set flash ratio

7. RPT: Wireless Flash Shooting with Manual Flash




Setting < RPT > stroboscopic flash.

- Press <MODE> button so that
 <(ψ) RPT > is displayed.
- Setting the stroboscopic flash. (Page 43)

Using a flash (master/slave) with a radio transmission wireless shooting function make it easy to shoot with advanced wireless multiple flash lighting, in the same way as TTL autoflash shooting. The basic relative position and operation range are as shown in the picture. You can then perform wireless TTL autoflash shooting just by setting the master unit to < TTL>.

Slave/Master Unit's Positioning and Operation Range

· Autoflash Shooting with One Slave Unit

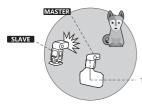

Transmission distance is about 100m.



- Use the supplied mini stand to position the slave unit.
 - · Before shooting, perform a test flash and test shooting
 - . The transmission distance might be shorter depending on the conditions such as positioning of slave units, the surrounding environment and whether conditions.

Wireless Multiple Flash Shooting

You can divide the slave units into two or three groups and perform i-TTL autoflash while changing the flash ratio (factor). In addition, you can set and shoot with a different flash mode for each firing group, for up to 5 groups.

• Auto Shooting with Two Slave Groups



· Auto Shooting with Three Slave Groups



Wireless shooting using radio transmission has advantages over wireless shooting using optic transmission, such as being less affected by obstacles, and not having to point the slave unit's wireless sensor toward the master unit. The main functional differences are as follows:

Function	Radio Transmission	Optic Transmission
Distance	100m	15m
Channel	1~32	1~4
To be disturbed	Hard	Easy



▲ The Reason & Solution of Not Triggering in Godox 2.4G Wireless

- 1. Disturbed by the 2.4G signal in outer environment (e.g. wireless base station, 2.4G wifi router, Bluetooth, etc.)
 - → To adjust the channel CH setting on the flash trigger (add 10+ channels) and use the channel which is not disturbed. Or turn off the other 2.4G equipment in
- 2. Please make sure that whether the flash has finished its recycle or caught up with the continuous shooting speed or not(the flash ready indicator is lighten) and the flash is not under the state of over-heat protection or other abnormal situation.
 - →Please downgrade the flash power output. If the flash is in TTL mode, please try to change it to M mode(a preflash is needed in TTL mode).
- 3. Whether the distance between the flash trigger and the flash is too close
- →Please turn on the "close distance wireless mode" on the flash trigger (< 0.5m): X1 series: press the test button and hold on, then turning it on until the flash ready indicator blinks for 2 times
- XPro series: Set the C.Fn-DIST to 0-30m.
- 4. Whether the flash trigger and the receiver end equipment are in the low battery states or not
 - →Please replace the battery(the flash trigger is recommended to use 1.5V disposable alkaline battery).

Other Applications

Wireless Control Function

The flash unit is built in with a Wireless Control Port so that you can wirelessly adjust the power level of the flash and the flash triggering.

To control the flash wirelessly, you need a FT-16S remote control set (on-camera and on-flash). Insert its receive end into the Wireless Control Port on the flash and insert the transmit end into the camera hot shoe. Settings made on the hotshoe-mounted transmit and receive ends will be wirelessly communicated

to the flash. Then you can press the camera shutter release button to trigger the flash. You can also hold the transmit end at hand to control your off-camera flash.





For full instructions on the use of FT series remote control, see its user manual.

Sync Triggering

The Sync Cord Jack is a Φ2.5mm plug. Insert a trigger plug here and the flash will be fired synchronously with the camera shutter.

- 52 -- 51 -

Modeling Flash

If the camera has a depth-of-field preview button, pressing it will fire the flash continuously for 1 second. This is called modeling flash. It enables you to see the shadow effects on the subject and the lighting balance. You can fire the modeling flash during wireless or normal flash shooting.

▲ • To avoid overheating and deteriorating the flash head, do not fire the modeling flash for more than 10 consecutive times. If you fire the modeling flash 10 consecutive times, allow at least 10 minutes' break for the camera flash.

Auto Focus Assist Beam

In poorly-lit or low-contrast shooting environments, the built-in auto focus assist beam will automatically light on to make it easier for autofocus. The beam will light up only when autofocus is difficult and get out as soon as the autofocus becomes correct.

If you want to turn off the auto focus assist beam, set the "AF" to "OFF" on the C.Fn settings.


• If you find the auto focus assist beam does not light up, this is because the camera has got a correct autofocus.

Position	Effective Range
Center	0.6~10m / 2.0~32.8 feet
Periphery	0.6~5m / 2.0~16.4 feet

Bounce Flash

By pointing the flash head toward a wall or ceiling, the flash will bounce off the surface before illuminating the subject. This can soften shadows behind the subject for a more natural-looking shot. This is called bounce flash.


To set the bounce direction, hold the flash head and turn it to a satisfying angle.

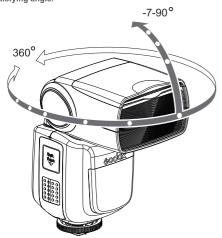


- If the wall or ceiling is too far away, the bounced flash might be too weak and result in underexposure.
 - The wall or ceiling should be a plain, white color for high reflectance. If the bounce surface is not white, a color cast may appear in the picture.

Creating a Catchlight

With the catchlight panel, you can create a catchlight in the subject's eyes to add life to the facial expression.

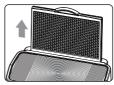


- Point the flash head upward by 90°.
- Pull out the wide panel. The catchlight panel will come out at the same time.

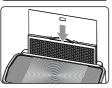

- Push the wide panel back in.
- 5 Push in only the wide panel.
 - Follow the same procedures as for bounce flash
- Point the flash head straight ahead and then upward by 90°. The catchlight will not appear if you swing the flash head left or right.
 - For best catchlight effect, stay 1.5m/4.9ft away from the subject.


ZOOM: Setting the Flash Coverage and Using the Wide Panel

The flash coverage can be set automatically or manually. It can be set to match the lens focal length from 20 mm to 200mm. Also, with the built-in wide panel, the flash coverage can be expanded for 14mm wide-angle lenses.

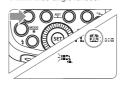

In Manual Zoom mode, press the <ZOOM/C.FN> button.

- Turn the Select Dial to change the flash coverage.
- If < A > is displayed, the flash coverage will be set automatically.
- If you set the flash coverage manually, make sure it covers the lens focal length so that the picture will not have a dark periphery.

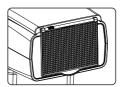

Using the Wide Panel

Pull out the wide panel and place it over the flash head as shown. The flash coverage will then be extended to 14 mm.

- The catchlight panel will come out at the same time. Push the catchlight panel back in.
- The <ZOOM/C.FN> button will not work

- 53 -



Low Battery Warning

If the battery power is low, < [] > will appear and blink on the LCD panel. Please replace the battery immediately.

C.Fn: Setting Custom Functions

The following table lists the available and unavailable custom functions of this flash.

	C.Fn Custom Functions			
Custom Function Signs	Function	Setting No.	Settings & Description	
m/ft	Distance indicator	m	m	
		ft	feet	
APO	Auto power off	ON	ON	
		OFF	OFF	
AF	AF-assist beam	ON	ON	
		OFF	OFF	
Sv APOT	Slave auto power	60min	60min	
	off timer	30min	30min	
BEEP	Beeper	ON	ON	
		OFF	OFF	
LIGHT	Backlighting time	12sec	Off in 12 sec.	
		OFF	Always off	
		ON	Always lighting	
LCD	LCD contrast ratio	0~9	10 levels	
ID	Wireless ID	OFF	Off	
		01-99	Choose any figure	
			from 01-99	
Sv LED	Wireless LED Lamp	OFF	Off	
		ON	on	

- Press < Zm/C.Fn> Backlight/Custom Setting Button for 2 seconds or longer until C.Fn menu is displayed. The "Ver x.x" in the topright corner refers to the software version.
- 2. Select the Custom Function No.
 - Turn the Select Dial to choose the Custom Functions.
- 3. Change the Setting
 - Press<SET> button and the Setting No. blinks.
 - Turn the Select Dial to set the desired number. Pressing <SET>
- In the C.Fn states, long press the "Clear" button for 2 seconds until "OK" is displayed on the panel, which means the values in C.Fn can be reset.

Protection Function

1. Over-Temperature Protection

- To avoid overheating and deteriorating the flash head, do not fire more than 30 continuous flashes in fast succession at 1/1 full power. After 30 continuous flashes, allow a rest time of at least 10 minutes.
- If you fire more than 30 continuous flashes and then fire more flashes in short intervals, the inner over-temperature protection function may be activated and make the recycling time over 10 seconds. If this occurs, allow a rest time of about 10 minutes, and the flash unit will then return to normal.
- When the over-temperature protection is started, [⇒]
 [■]
 is shown on the LCD display.

Number of flashes that will activate over-temperature protection:

Power Output Level	Number of Flashes
1/1	30
1/2 +0.7	40
1/2 +0.3	50
1/2	60
1/4(+0.3,+0.7)	100
1/8(+0.3,+0.7)	200
1/16(+0.3,+0.7)	300
1/32(+0.3,+0.7)	500
1/64(+0.3,+0.7)	1000
1/128(+0.3,+0.7)	

Number of flashes that will activate over-temperature protection in high-speed sync triggering mode:

Power Output	Times
1/1	15
1/2(+0.3,+0.7);	20
1/4(+0.3,+0.7)	30
1/8(+0.3,+0.7);	
1/16(+0.3,+0.7)	40
1/32(+0.3,+0.7);	
1/64(+0.3,+0.7);	50
1/128(+0.3,+0.7);	

2. Other Protections

The system provides real-time protection to secure the device and your safety. The following lists prompts for your reference:

Prompts on LCD Panel	Meaning
E1	A failure occurs on the recycling system so that the
	flash cannot fire.
	Please restart the flash unit. If the problem still exists,
	please send this product to a maintenance center.
E2	The system gets excessive heat. Please allow a rest
	time of 10 minutes.
E3	The voltage on two outlets of the flash tube is too high.
	Please send this product to a maintenance center.
E9	There are some errors occurred during the upgrading
	process. Please using the correct firmware upgrade
	method.

Technical Data

Model		V860IIN		
• Type				
Compatible Ca	meras	Nikon DSLR cameras (i-TTL autoflash)		
Guide No.		60 (m ISO 100)		
(1/1 output @ 200mm)		190 (feet ISO 100)		
Flash Coverage		20 to 200mm (14mm with wide panel)		
		Auto zoom (Flash coverage set automatically		
		to match the lens focal length and image size)		
		Manual zoom		
		Swinging/tilting flash head (bounce flash): 0 to 360		
		horizontally and -7° to 90° vertically		
Flash Duration	1	1/300 to 1/20000 seconds		
• Exposure Co	ontrol			
Exposure cont	rol system	i-TTL autoflash and manual flash		
Flash exposure	е	Manual. FEB: ±3 stops in 1/3 stop increments		
compensation	(FEC)	(Manual FEC and FEB can be combined.)		
Sync mode		High-speed sync (up to 1/8000 seconds),		
		first-curtain sync, and second-curtain sync		
Multi flash		Provided (up to 90 times, 100Hz)		
Wireless Fla	sh (Optic t	ransmission and 2.4G transmission)		
Wireless flash	function	Master, Slave, Off		
Controllable sla	ave groups	3 (A, B, and C)		
Transmission	Optic	Indoors: 12 to 15 m / 39.4 to 49.2 ft.		
range		Outdoors: 8 to 10 m / 26.2 to 32.8 ft.		
(approx.)		Master unit reception angle: ±40° horizontally,		
		±30° vertically		
	2.4G	100m		
Channels	Optic	4 (1, 2, 3, and 4)		
	2.4G	32 (1~32)		
Slave-ready in	dicator	Two red indicators blink		
Modeling flash		Fired with camera's depth-of-field preview button		
• Auto Focus	Assist Bea	m		
Effective range		Center: 0.6~10m / 2.0~32.8 feet		
Ü	, , ,	Periphery: 0.6~5m / 2.0~16.4 feet		
Power Supp	lv			
Power source	.,	11.1V/2000mAh Li-ion polymer battery		
Recycle time		<1.5 seconds. Red LED indicator will light up when		
. 100,010 11110		the flash is ready.		
Full power flas	hes	Approx. 650		
Power saving		Power off automatically after approx. 90 seconds		
. sasa suving		of idle operation. (60 minutes if set as slave)		
Sync Triggering Mode		Hotshoe, 2.5mm sync line, Wireless control port		
Sync Triggering Wode Color Temperature		Hotshoe, 2.5mm sync line, Wireless control port		
Dimensions		3000±200K		
		L 0.4204.00		
WxHxD		64*76*190 mm		
Weight without battery		430g		
Weight with battery		540g		
2.4G Frequenc		2413.0MHz-2465.0MHz		
Max. Transmitt	ting Power	5dbm		

Troubleshooting

If there is a problem, refer to this Troubleshooting Guide.

The Camera Flash does not fire.

- The camera flash is not attached securely to the camera.
- →Attach the camera's mounting foot securely to the camera.
- The electrical contacts of the Camera Flash and camera are dirty.
 - →Clean the contacts.

The power turns off by itself.

- After 90 seconds of idle operation, auto power off took effect if the flash is set as master.
 - →Press the shutter button halfway or press any flash button to wake up.
- After 60 minutes (or 30 minutes) of idle operation, the flash unit will enter sleep mode if it is set as slave.
 - →Press any flash button to wake up.

Auto zoom does not work.

- The camera flash is not attached securely to the camera.
 - →Attach the camera flash's mounting foot to the camera.

The flash exposure is underexposed or overexposed.

- You used high-speed sync.
 - →With high-speed sync, the effective flash range will be shorter. Make sure the subject is within the effective flash range displayed.
- You used Manual Flash mode.
 - →Set the flash mode to i-TTL or modify the flash output.

Photos have dark corners or only parts of the target subject are illuminated.

- The focal length of lens exceeds the flash coverage.
 - →Check the flash coverage you set. This flash unit has the flash coverage between 20 and 200mm, which fits medium-format cameras. Pull the wide panel out to extend the flash coverage.

- 57 -

Firmware Upgrade

- As the firmware upgrade needs the support of Godox G3 software, please download and install the "Godox G3 firmware upgrade software" and choose the corresponding firmware file.
- Please refer to the latest electronic instruction manual.



Compatible Camera Models

This flash unit can be used on the following

Nikon DSLR camera models:

D800	D700	D7100	D7000	D5200	D5100	D5000
D300	D300S	D3200	D3100	D3000	D200	D70S
D810	D610	D90	D750			

This table only lists the tested camera models, not all Nikon DSLR series cameras. For the compatibility of other camera models, a self-test is recommended.

Rights to modify this table are retained.

Maintenance

- Shut down the device immediately should abnormal operation be detected.
- Avoid sudden impacts and the product should be dedusted regularly.
- It is normal for the flash tube to be warm when in use. Avoid continuous flashes if unnecessary.
- Maintenance of the flash must be performed by our authorized maintenance department which can provide original accessories.
- This product, except consumables e.g. flash tube, is supported with a one-year warranty.
- Unauthorized service will void the warranty.
- If the product had failures or was wetted, do not use it until it is repaired by professionals.
- Changes made to the specifications or designs may not be reflected in this manual.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the

receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction

Warning

Operating frequency:2412.99MHz-2464.49MHz Maximum EIRP Power: 3.25dBm

Declaration of Conformity

GODOX Photo Equipment Co.,Ltd. hereby declares that this equipment are in compliance with the essential requirements and other relevant provisionsof Directive 2014/53/EU. In accordance with Article 10(2) and Article 10(10), this product is allowed to be used in all EU member states. For more information of DoC. Please click this web link:

 $https://www.godox.com/DOC/Godox_V860II_Series_DOC.pdf$

The device complies with RF specifications when the device used at 0mm from your body.

- 59 -

产品保修

尊敬的用户,本保修卡是申请保修服务的重要凭证,请您配合销售商填写并妥善保管,谢谢!

产品信息	型号	产品条码			
用户信息	姓名	联系电话			
	通信地址				
销售商	名称				
信息	联系电话				
	通信地址				
	销售日期				
备注					

注: 此表应由销售商盖章确认。

适用产品

本文件适用于相关《产品保修信息》(见后面说明)所列产品,其他非属此范围的产品或部件(如促销品、赠品及其他出厂后附加的部件等)不在此保修承诺内。

保修期

产品及部件的相应保修期按相关的《产品保修信息》执行。保修期自产品首次购买日起篇,购买日以购买产品时保修卡登记日期为准。

如何获得保修服务

要保修服务,您可直接与产品销售商或授权服务机构联系,也可拨打神牛产品售后 服务电话,与我们联系,由我们的服务人员为您安排服务。申请保修时,您应提供 有效的保修卡作为保修凭证,方可获得保修。如您不能提供有效的保修卡,则在我 们可确认产品或部件属于保修范围的情况下,也可以为您提供保修,但这不作为 我们的义务。

不适用保修的情况

如产品存在下列清况,本文件项下的保证和服务将不适用 ①产品或部件超过相应保修期;2错误或不适当使用、维护或 保管导致的故障或损坏,如:不当搬运;非按产品合理预期用途使用;不当振拨外接设备;跌落或外力挤压;接触或暴露于不适当温度、溶剂、酸碱、水浸或潮湿环境;③由非神牛授权机构或人员安装、修理更改、添加或拆卸造成的故障或损坏;④产品或部件原有识别信息被修改变更或除金;⑤无有效保修卡;⑥使用非合法授权、非标准或非公开发行的软件造成的故障或损坏;⑥在可抗力或参外事件造成的故障或损坏。例其他非因产品本身质量问题导致的故障或损坏。遇上述情况,您应向相关责任方寻求解决,神牛对此不承担任何责任。因非在保修期或保修范围内的部件、附件或软件导致产品不能正常使用的方面,不是保修范围内的故障。产品使用过程中正常的脱色,磨损和消耗,不是保修范围内的故障。

产品保修和服务支持信息

产品的保修期和服务类型按以下《产品保修信息》执行:

7 出口体诊物和成为关至及以下"()" 出体诊由心》[70].				
产品类别	选件名称	保修期(月)	保修服务类型	
部件	电路板	12	客户送修	
	电池	3	客户送修	
	充电器、电源线,同步线等带电 性能的部件。	12	客户送修	
其他	如闪光管、造型灯泡、外壳、 保护罩、锁紧装置、包装等。	无	无保修	

神牛产品售后服务电话 0755-29609320-8062

Warranty

Dear customers, as this warranty card is an important certificate to apply for our maintenance service, please fill in the following form in coordination with the seller and safekeep it. Thank you!

the seller and salekeep it. Thank you:					
Product Information	Model	Product Code Number			
Customer Information	Name	Contact Number			
	Address				
Seller	Name				
Information	Contact Number				
	Address				
Note:					

Note: This form shall be sealed by the seller.

Applicable Products

The document applies to the products listed on the **Product Maintenance Information** (see below for further information). Other products or accessories (e.g. promotional items, giveaways and additional accessories attached,etc.) are notincluded in this warranty scope.

Warranty Period

The warranty period of products and accessories isimplemented according to the relevant Product MaintenanceInformation. The warranty period is calculated from the day(purchase date) when the product is bought for the first time.And the purchase date is considered as the date registered onthe warranty card when buying the product.

How to Get the Maintenance Service

If maintenance service is needed, you can directly contact the product distributor or or authorized service institutions. You can also contact the Godox after-sale service call and we will offer you service. When applying for maintenance service, you should provide valid warranty card, warranty card, we may offer you maintenance service once confirmed that the product or accessory is involved in the maintenance scope, but that shall not be considered as our oblidators.

Inapplicable Cases

The guarantee and service offered by this document are not applicable in the following cases: ①. The product or accessory has expired its warranty period; ②. Breakage or damage caused by inappropriate usage, maintenance or preservation, such as improper packing, improper usage, improper plugging in/out external equipment, falling off or squeezing by external force, contacting or exposing to the improper temperature, solvent, acid, base, flooding and damp environments, etc; ③. Breakage or damage caused by non-authorized institution or staff in the process of installation, maintenance, alternation, addition and detachment; ④. The original identifying information of product or accessory is modified, alternated, or removed; ⑤. No valid warranty card; ⑥. Breakage or damage caused by using illegally authorized, nonstandard or non-public released software; ⑦. Breakage or damage that could not be attributed to the product itself. Once met these situations above, you should seek solutions from the related responsible parties and Godox assumes no responsibility. The damage caused by parts, accessories and software that beyond the warranty period or scope is not included in our maintenance scope. The normal discoloration, abrasion and consumption are not the breakage within the maintenance scope.

Maintenance and Service Support Information

The warranty period and service types of products are implemented according to the following **Product Maintenance Information**:

Product Type	Name	Maintenance Period(month)	Warranty Service Type
Parts	Circuit Board	12	Customer sends the product to designated site
	Battery	3	Customer sends the product to designated site
	Electrical parts e.g.battery charger, power cord, sync cable, etc.	12	Customer sends the product to designated site
Other Items	Flash tube, modeling lamp, lamp body, lamp cover, lockingdevice, package, etc.	No	Without warranty

Godox After-sale Service Call 0755-29609320-8062